



### Air Conditioner Operating Instructions



Three speed on-off blower switch.  
Turn clockwise to operate.



Thermostat switch. Turn clockwise for increased cooling. In the full counter clockwise position no refrigeration occurs.

#### Discharge Superheated Air

The inside air temperature of a car parked in direct sun light, with windows closed, can reach 150°. To secure maximum efficiency from your air conditioner - after starting the engine, adjust the thermostat to full cold; set fan on low speed. Open windows and vents to discharge superheated air.

#### Regulate Controls

Close windows, fresh air vents and leave air speed on low fan for a few minutes. Then, for increased circulation, turn fan speed on medium. High speed may be used to circulate air through entire car after inside temperature is down to comfortable level. The slowest speed provides the coldest air but less volume.

The thermostat switch automatically controls passenger compartment temperature.

If air becomes stale from smoking it may be advisable to open vents for a brief period to permit exchange of air.

#### Service The Air Conditioner

During the winter, it is advisable to operate your air conditioner for a few minutes each week to keep seals and fittings properly lubricated. Prior to hot weather each year, your air conditioner should be thoroughly checked and serviced by an authorized dealer.

#### Additional Benefits of Your Air Conditioner

DPD air conditioners dehumidify and wash the air of dust and pollen, while cooling the passenger compartment. The moisture extracted is condensed and drained through a small tube to the outside of the car. Dust and noise are gone with the wind.

#### Warranty Registration

The Warranty Registration Card must be mailed to DPD to validation warranty.



## OWNERS OPERATING INSTRUCTIONS

#### Become Familiar With The Unit

DPD air conditioners are designed and constructed to complement the quality craftsmanship of this vehicle. You will enjoy greater utility and comfort in driving throughout many years of dependable service, and your car will have greater value when you sell or trade it.

Take a few minutes now to familiarize yourself with the unit's operation in order to gain year-round maximum performance and pleasure from both vehicle and air conditioner.

#### Regulate Controls

The "AIR" knob is the "on-off" switch; this knob also controls the speed of the blowers which circulate cool air throughout the vehicle. Turning the knob clockwise engages the fans into low, medium, and high speed. Rotating completely counter-clockwise turns the unit off.

The "TEMP" knob is the thermostat switch which automatically controls passenger compartment temperature. Rotate the knob clockwise for cooler temperatures. Operation at maximum setting of thermostat for an extended period is discouraged. Extended operation at maximum blower and thermostat settings may cause icing of evaporator coil. At highway speed, you may find it advisable to adjust the thermostat to the half-way position.

#### Discharge Superheated Air

After starting the engine, adjust the thermostat to full cooling; set blower on low speed. Open the windows to allow superheated air to escape. As soon as you begin to feel cooler, close windows. Adjust blower and thermostat as desired.

#### Exchange Stale Air

Close the fresh air vents completely when operating the air conditioner. If air becomes stale in the passenger compartment, it may be advisable to open a window or vent for a brief period to permit an exchange of air.

#### Service The Air Conditioner

Your DPD air conditioner should be inspected and serviced by an Authorized Dealer at the beginning of each season. This service should include cleaning of the condenser fins and a refrigerant level check. Drive belt tension should be checked each time your vehicle receives periodic maintenance. During the winter, it is advisable to operate your air conditioner for a few minutes each week to keep seals and fittings properly lubricated.

**Drive Belts:** Your DPD air conditioner is specifically designed for your automobile. Belts which drive your air conditioning system are also specially designed for each unit. We recommend you purchase one additional belt from your Authorized Parts Dept.



AFTER INSTALLATION OF THE AIR CONDITIONER IN THE VEHICLE, PLEASE PLACE THESE OPERATING INSTRUCTIONS OVER ONE OF THE AIR CONDITIONER KNOBS.

CAUTION: IF THERE IS NO COOLING, TURN THE AIR CONDITIONER OFF. A LEAKING FITTING OR RUPTURE OF A REFRIGERANT LINE WILL CAUSE LOSS OF COMPRESSOR OIL. IF THE COMPRESSOR IS OPERATED WITHOUT OIL, THE COMPRESSOR IS NOT WARRANTABLE.

**Benefit From Extra Efficiency**

DPD air conditioners dehumidify and wash the air free of dust and pollen, while cooling the passenger compartment. The moisture extracted is condensed and drained through a small tube under the car. Dust and noise are gone with the wind.

Use your air conditioner to de-fog your windows during damp, winter days. Set the thermostat and fan at low position for a few minutes to extract moisture from the interior and quickly clear the windows. Operate the fan at low speed (thermostat at "off" position) to circulate warm air from the vehicle heater to every part of the passenger compartment.

OM-160 10/73



# DPD OWNER'S WARRANTY VOUCHER

(Keep in Glove Box of Vehicle)

Vehicle Type \_\_\_\_\_  
Vehicle Serial No. \_\_\_\_\_  
Complete Evap. No. \_\_\_\_\_  
Compressor No. \_\_\_\_\_  
Date Inst. \_\_\_\_\_  
MILES \_\_\_\_\_  
Selling Dealer Code \_\_\_\_\_

Selling Dealer \_\_\_\_\_  
ADDRESS \_\_\_\_\_  
City/State \_\_\_\_\_ Zip \_\_\_\_\_

**IMPORTANT:** This card must be displayed to authorized dealer for warranty repairs.

Note To Dealer: In submitting your claim to DPD, it is imperative that we have all the information on this card.

(Complete and mail this card to D P D)

## DPD AIR CONDITIONER

### WARRANTY REGISTRATION CARD

### PRODUCT QUALITY CONTROL DELIVERY INSPECTION

ALL PARTS RECEIVED  
IN PERFECT  
CONDITION

Yes  No

Quality of Installation

OM-162 10/73

Unit Installed in \_\_\_\_\_

Chassis No. \_\_\_\_\_  
Dealer No. \_\_\_\_\_

Type \_\_\_\_\_  
Inst. Date \_\_\_\_\_ Mo. \_\_\_\_\_ Year \_\_\_\_\_

Miles \_\_\_\_\_  
Damage Code \_\_\_\_\_

EVAP NO. \_\_\_\_\_  
COMP NO. \_\_\_\_\_

DPD MANUFACTURING CO., INC.

Service Manager's Signature \_\_\_\_\_

CUSTOMER \_\_\_\_\_

MAILING ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

STATE \_\_\_\_\_

ZIP \_\_\_\_\_

# ROSSCHIE

# 914-2,0

## EMISSION CONTROL SYSTEM

MAINTENANCE REQUIREMENTS AND WARRANTY

# 1974 MODEL