


- 1 - Intake air distributor
- 2 - Air cleaner
- 3 - Piston
- 4 - Combustion chamber
- 5 - Branch pipe with flame trap

- 6 - Oil breather
- 7 - Regulating valve
- 8 - Valve chamber in head
- 9 - Pushrod tube
- 10 - Crankcase

Subsequent installation on earlier engines is not anticipated. Existing components remain available.


Heating and Ventilation

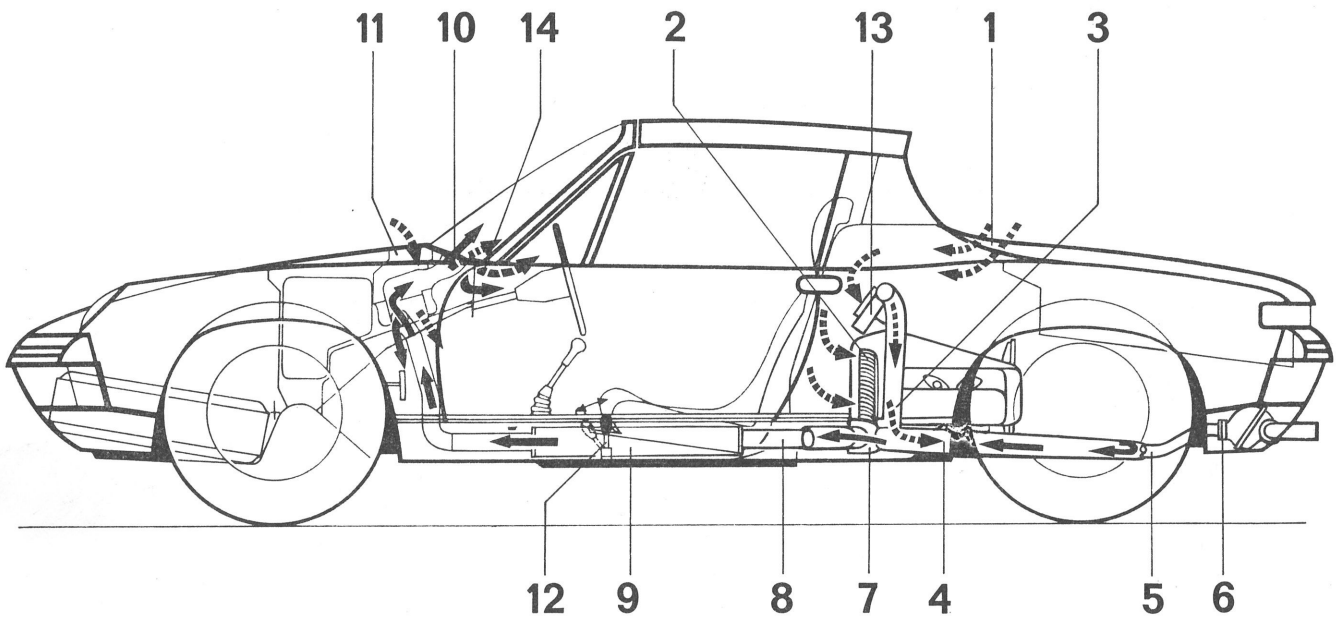

Key to diagram

- 1 - Engine compartment hood
- 2 - Cooling fan
- 3 - Air take-off point
- 4 - Heat exchanger
- 5 - Exhaust pipe
- 6 - Emission control device
- 7 - Flap valve housing
- 8 - Connecting tube
- 9 - Silencer
- 10 - Windshield
- 11 - Ventilation system
- 12 - Heater control levers
- 13 - Cooling fan
- 14 - Side outlets

To improve interior ventilation and to defogg the side window, additional air outlets have been installed.

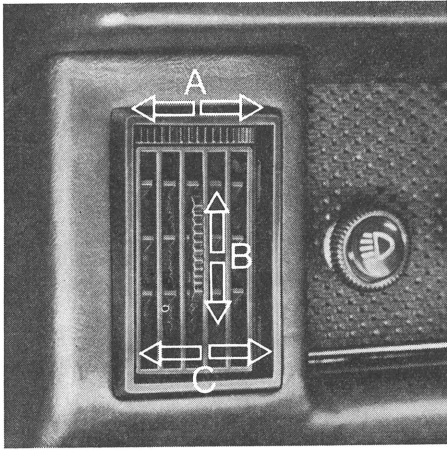


These outlets are at the left and right of the instrument panel. Horizontal and vertical adjustment of the airflow is possible.

Interior trim


The trim of the inside door panels on 1972 model cars has an embossed weave pattern.

Interior equipment

Passenger seat

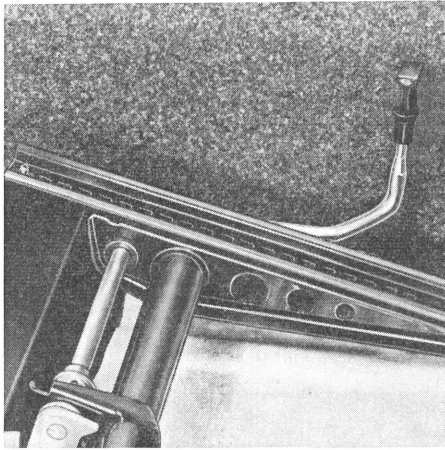

A major modification on 1972 models concerns the passenger seat. From model 1972 the seat is equipped with forward movement and height adjustments.

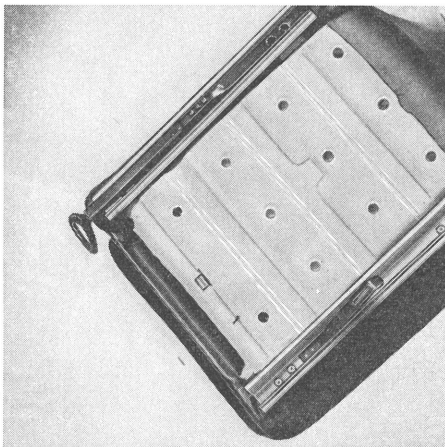

The passenger seat is now a mirror-image version of the existing driver's seat.


The forward adjustment lever on both seats has now been extended upward to simplify operation.

Steering

Steering column switch

From the 1972 model, a new standardized steering column switch will be installed. The new switch assembly incorporates turn indicator and headlight dimmer functions together with operation of the wipers and washers. The previous turn/push switch for the wipers and washers is no longer used.

The washer unit continues to be pneumatically operated.

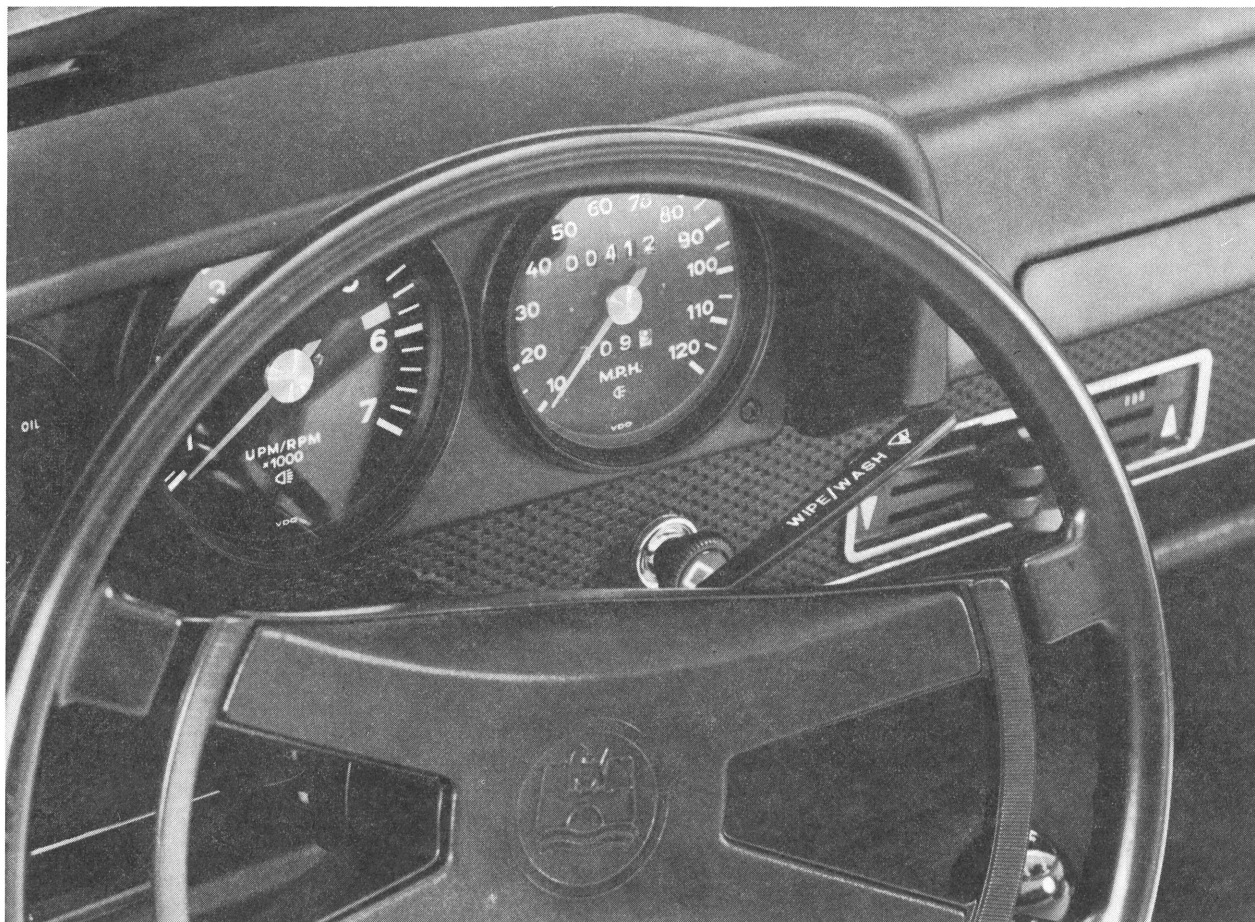

On the type 914, the steering column tube and upper universal joint were previously a single component.

From the 1972 model, in conjunction with the new steering column switch, modifications have become necessary to the steering column.

The following components are affected:


Steering column tube (now available separately), part number 914.347.061.18.

Universal joint (now separate, previously the same component was installed between the intermediate shaft and the steering shaft), part number 914.347.025.01.

Intermediate shaft (0.22 in. longer than previously), part number 914.347.214.02.


Elektrischer
Schaltplan 914

ELECTRICAL WIRING DIAGRAM 914

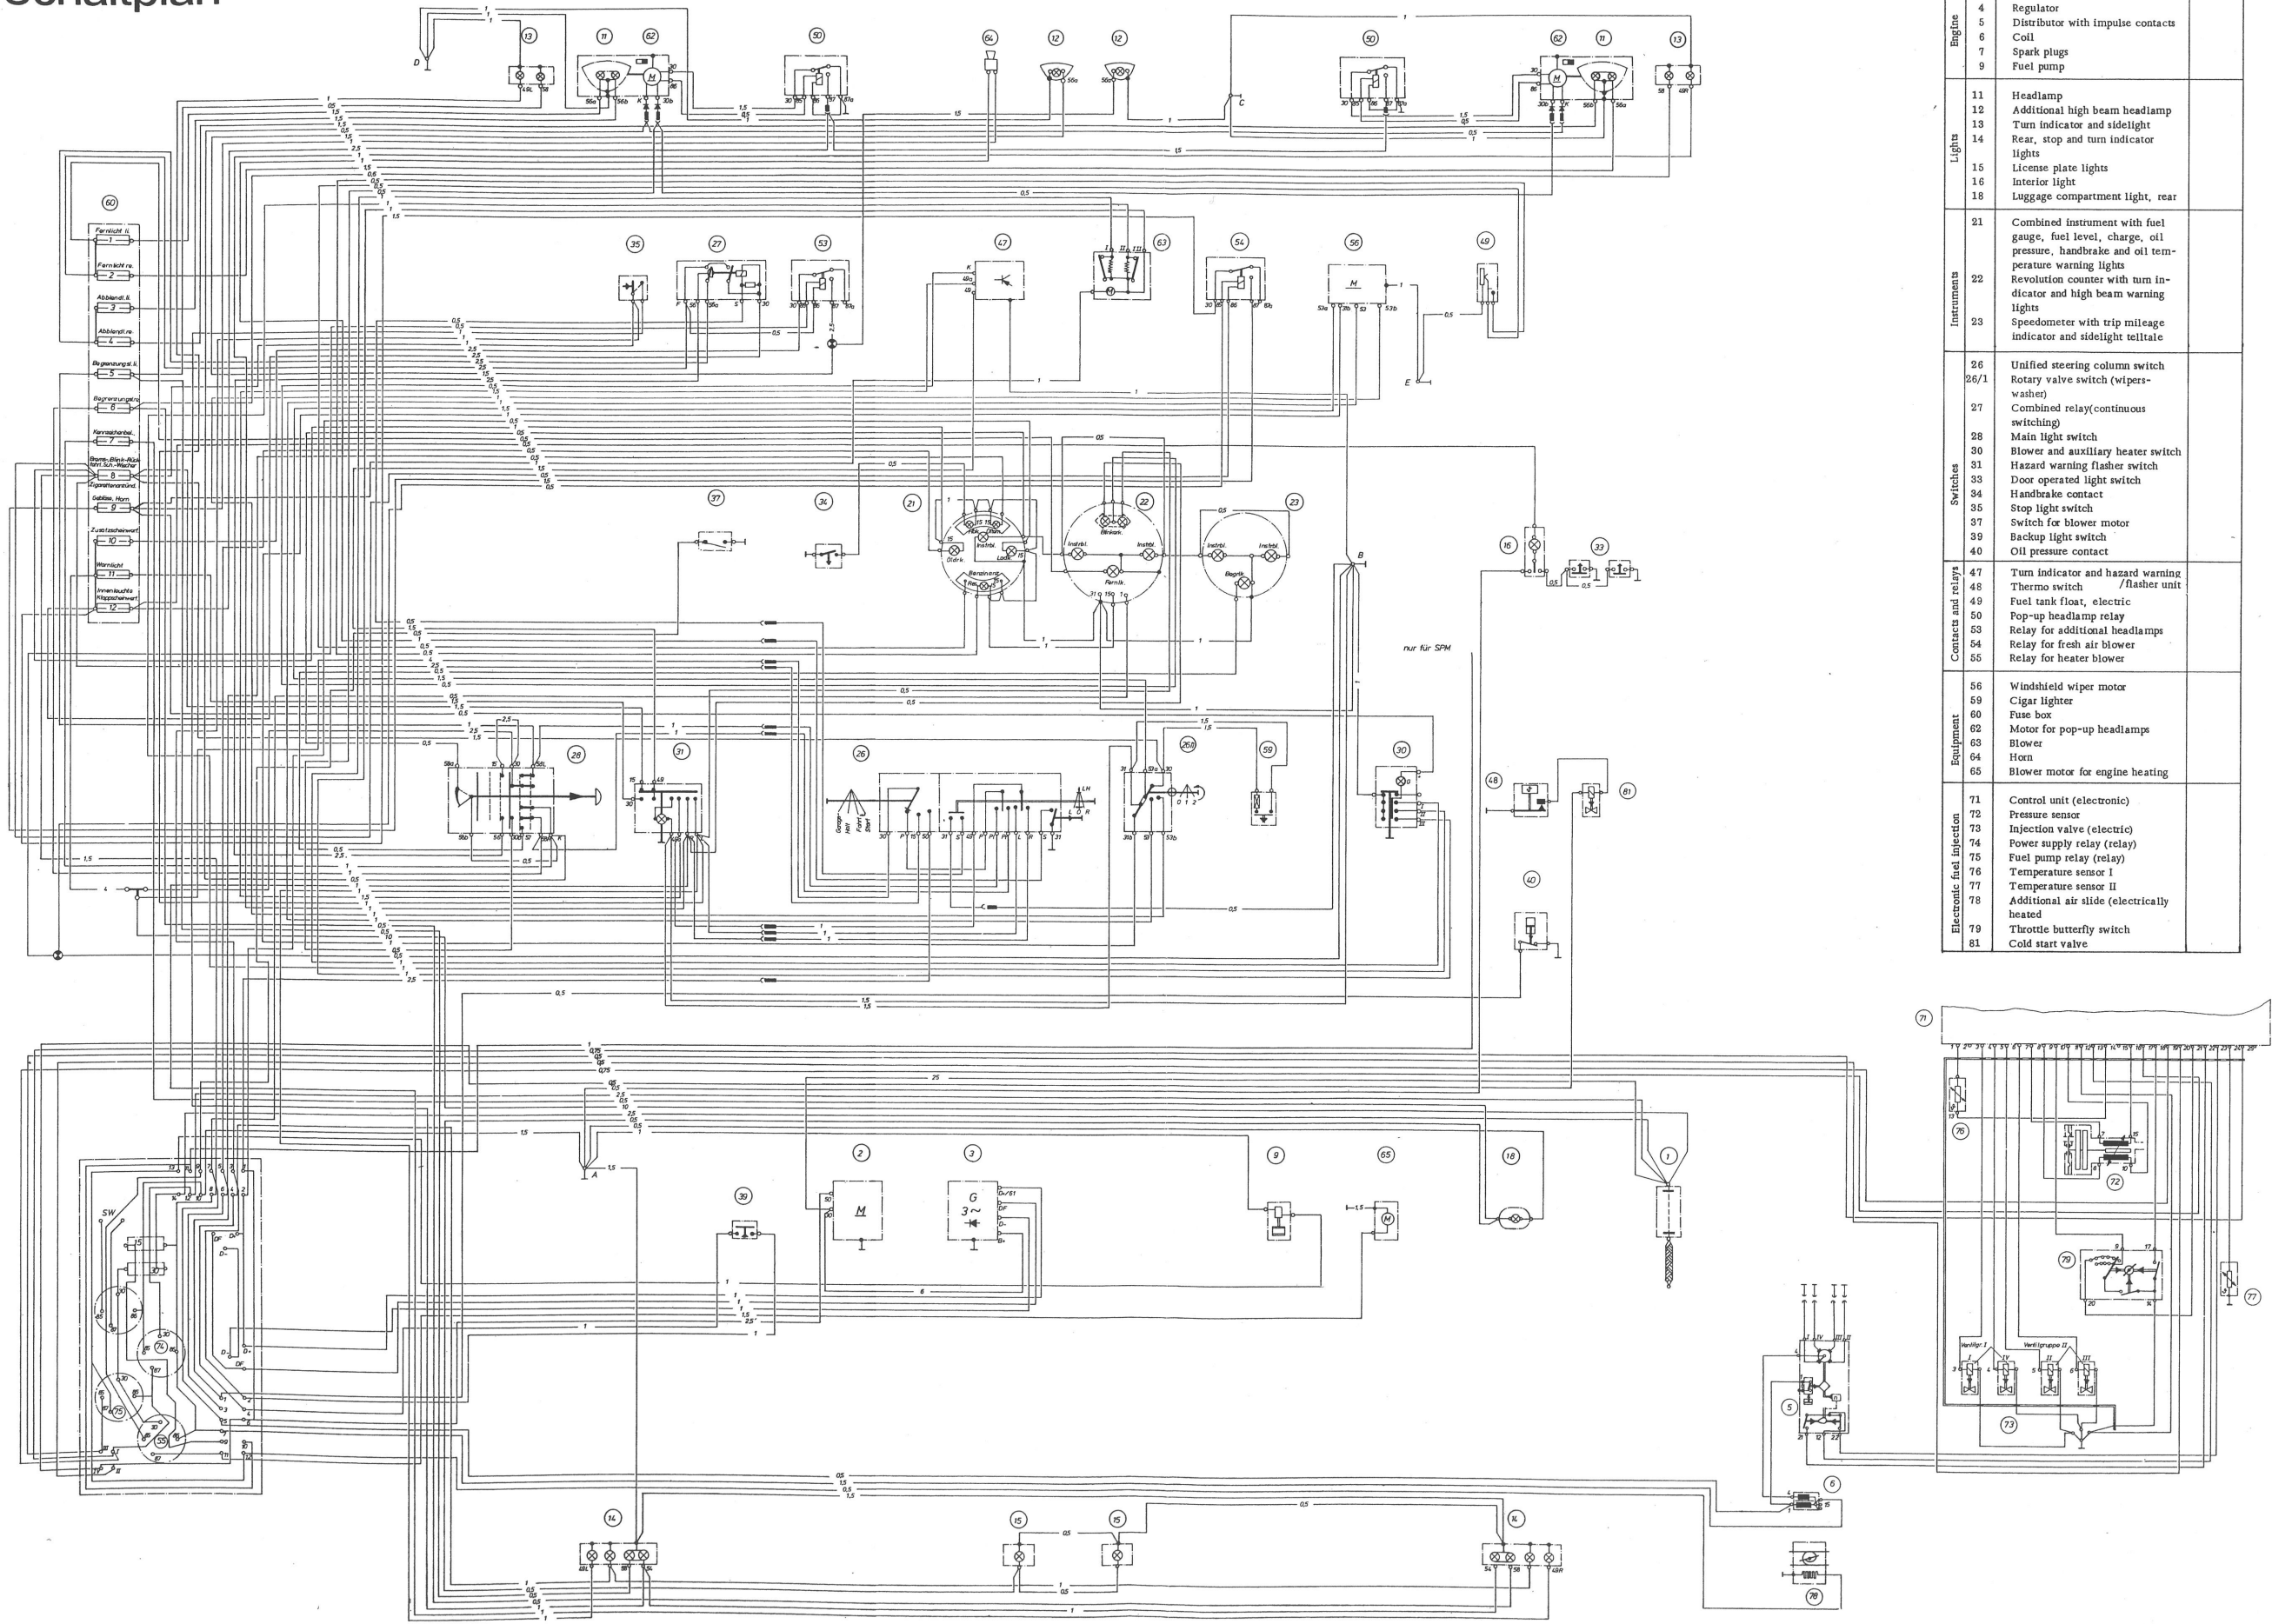

No.	Description	Remarks
1	Battery	
2	Starter	
3	Alternator	
4	Regulator	
5	Distributor with impulse contacts	
6	Coil	
7	Spark plugs	
8	Fuel pump	
11	Headlamp	
12	Additional high beam headlamp	
13	Turn indicator and sidelight	
14	Rear, stop and turn indicator	
15	Lights	
16	License plate lights	
17	Interior light	
18	Luggage compartment light, rear	
21	Combined instrument with fuel gauge, fuel level, charge, oil pressure, handbrake and oil temperature warning lights	
22	Revolution counter with turn indicator and high beam warning lights	
23	Speedometer with trip mileage indicator and sidelight telltale	
26	Unified steering column switch	
26/1	Rotary valve switch (wipers-washer)	
27	Combined relay (continuous switching)	
28	Main light switch	
30	Blower and auxiliary heater switch	
31	Hazard warning flasher switch	
33	Door operated light switch	
34	Handbrake contact	
35	Stop light switch	
37	Switch for blower motor	
39	Backup light switch	
40	Oil pressure contact	
47	Turn indicator and hazard warning	
48	Thermo switch / flasher unit	
49	Fuel tank float, electric	
50	Pop-up headlamp relay	
53	Relay for additional headlamps	
54	Relay for fresh air blower	
55	Relay for heater blower	
56	Windshield wiper motor	
59	Cigar lighter	
60	Fuse box	
62	Motor for pop-up headlamps	
63	Blower	
64	Horn	
65	Blower motor for engine heating	
71	Control unit (electronic)	
72	Pressure sensor	
73	Injection valve (electric)	
74	Power supply relay (relay)	
75	Fuel pump relay (relay)	
76	Temperature sensor I	
77	Temperature sensor II	
78	Additional air slide (electrically heated)	
79	Throttle butterfly switch	
81	Cold start valve	

Elektrischer Schaltplan 914/6

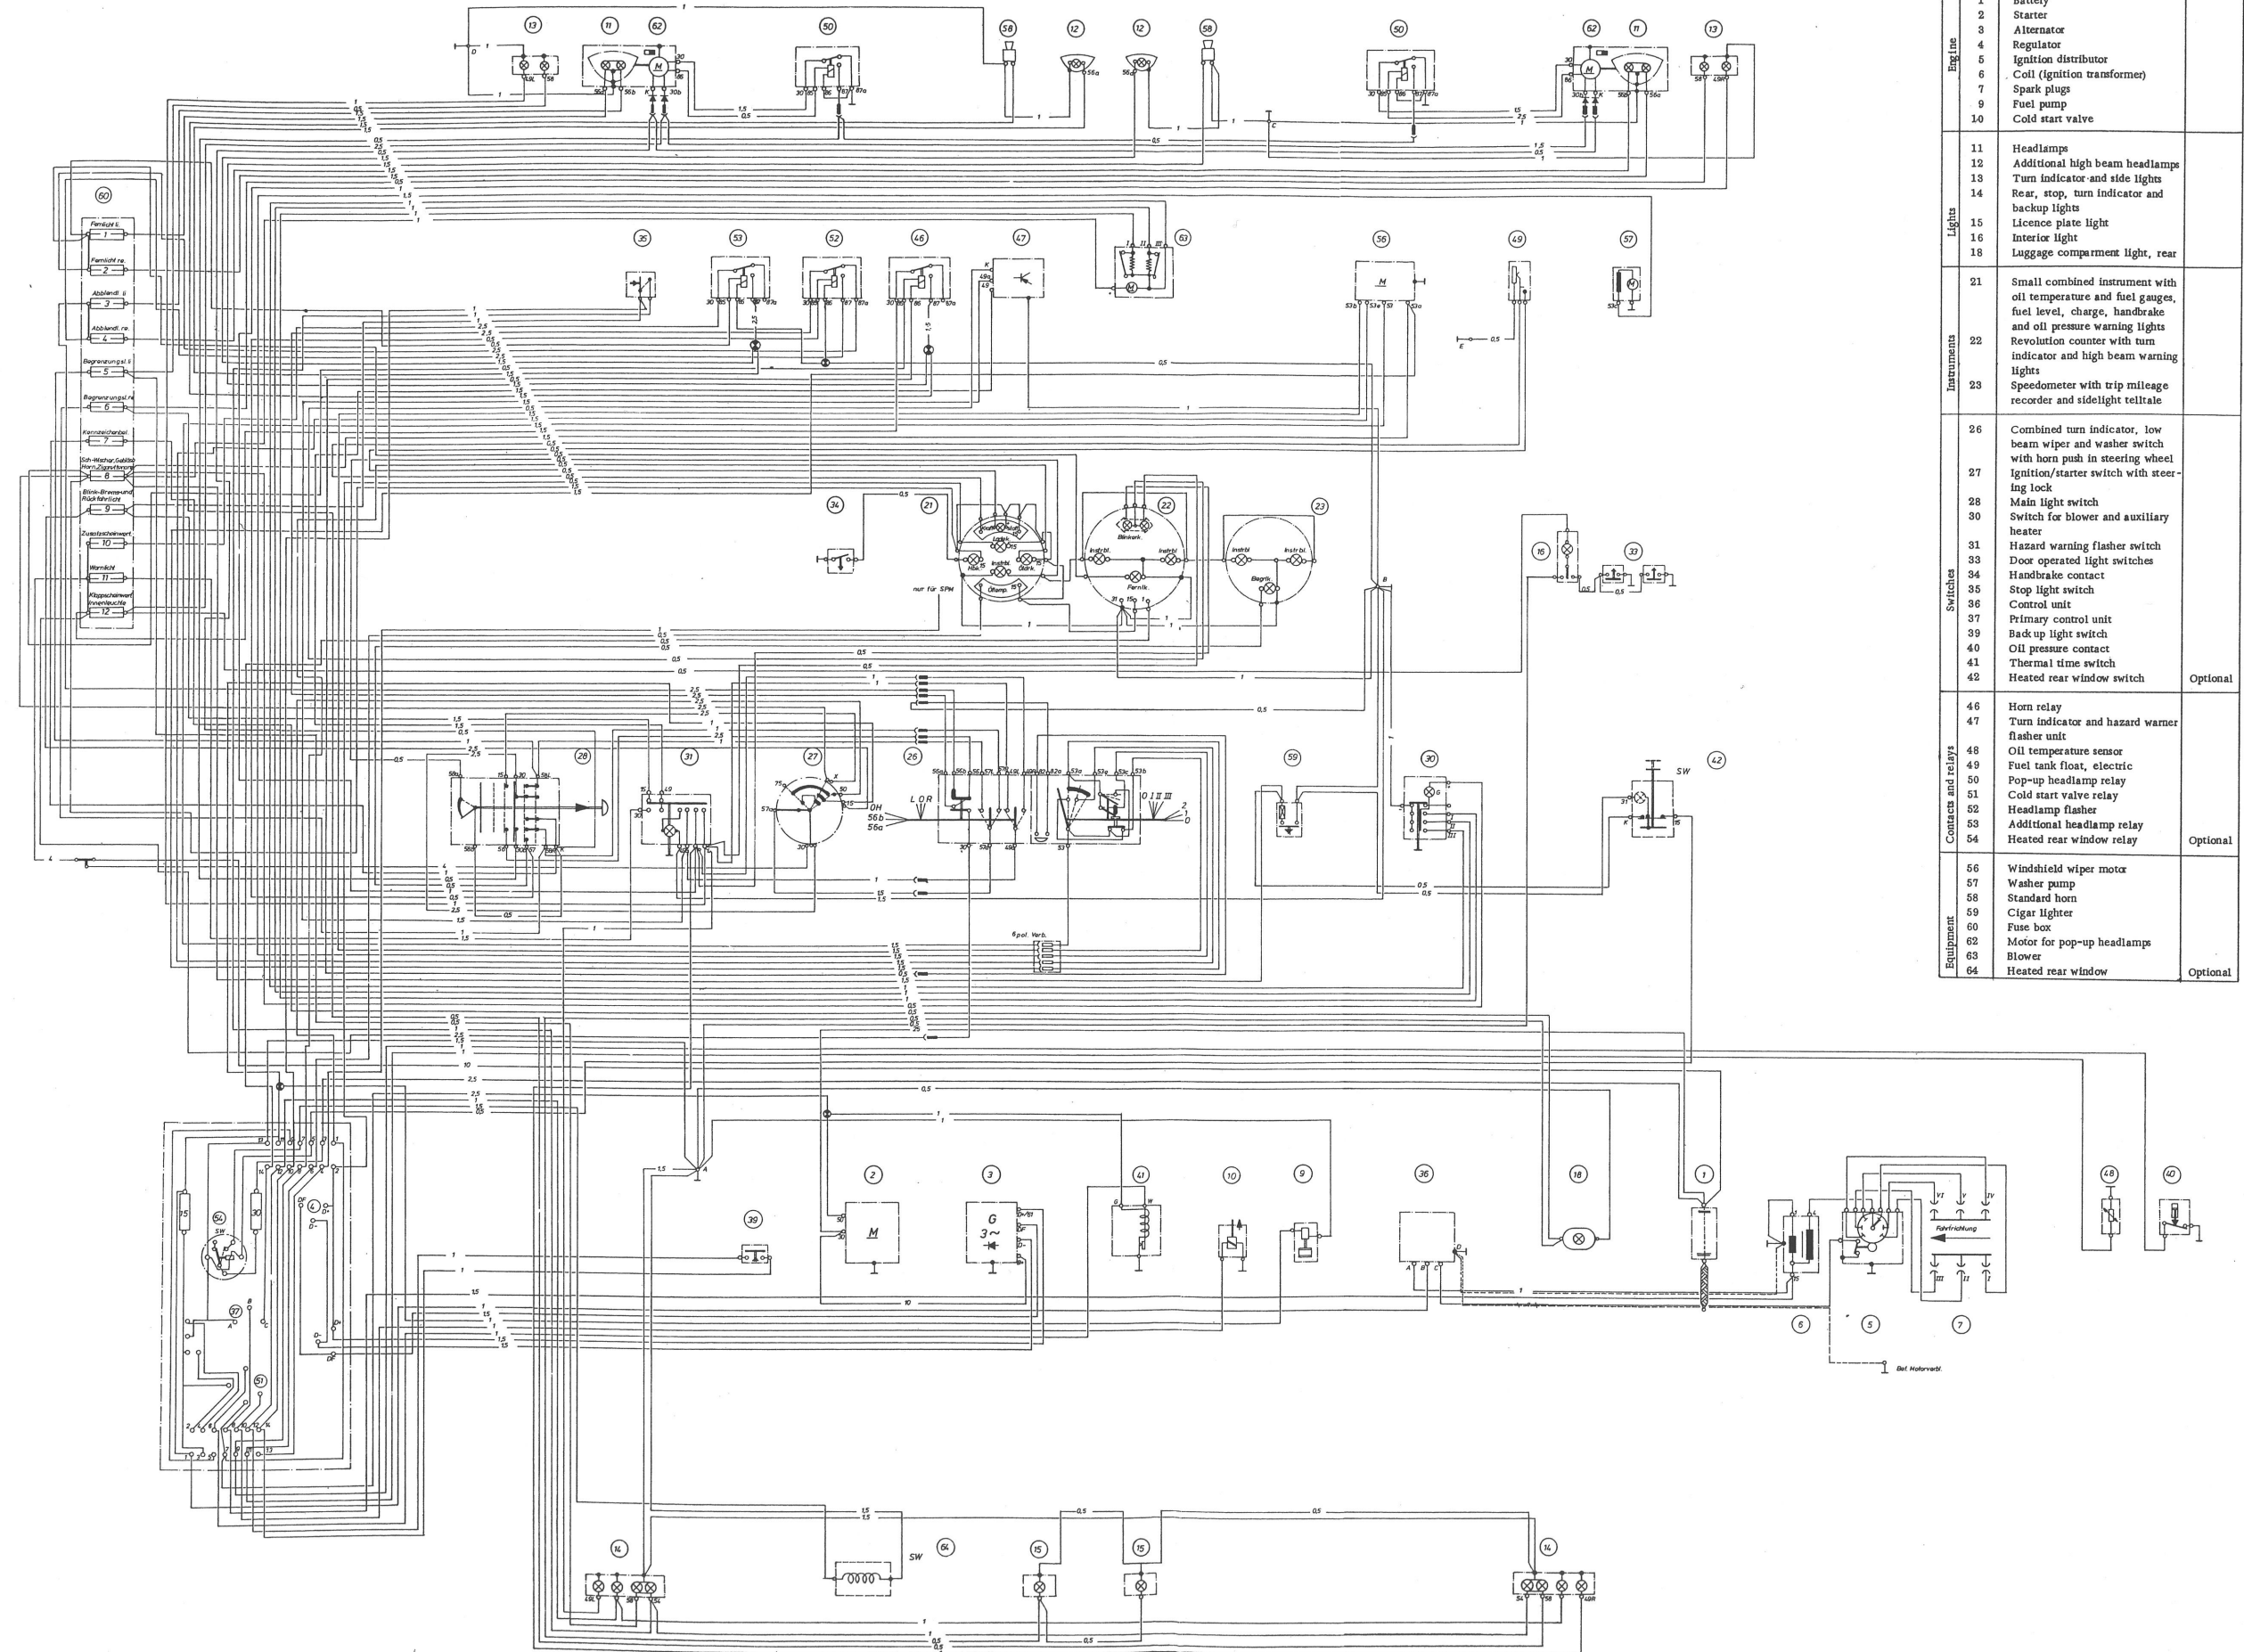

ELECTRICAL WIRING DIAGRAM 914/6

No.	Description	Remarks
1	Battery	
2	Starter	
3	Alternator	
4	Regulator	
5	Ignition distributor	
6	Coil (ignition transformer)	
7	Spark plugs	
9	Fuel pump	
10	Cold start valve	
11	Headlamps	
12	Additional high beam headlamps	
13	Turn indicator and side lights	
14	Rear, stop, turn indicator and backup lights	
15	Licence plate light	
16	Interior light	
18	Luggage compartment light, rear	
21	Small combined instrument with oil temperature and fuel gauges, fuel level, charge, handbrake and oil pressure warning lights	
22	Revolution counter with turn indicator and high beam warning lights	
23	Speedometer with trip mileage recorder and sidelight telltale	
26	Combined turn indicator, low beam wiper and washer switch with horn push in steering wheel	
27	Ignition/starter switch with steering lock	
28	Main light switch	
30	Switch for blower and auxiliary heater	
31	Hazard warning flasher switch	
33	Door operated light switches	
34	Handbrake contact	
35	Stop light switch	
36	Control unit	
37	Primary control unit	
39	Back up light switch	
40	Oil pressure contact	
41	Thermal time switch	
42	Heated rear window switch	Optional
46	Horn relay	
47	Turn indicator and hazard warning flasher unit	
48	Oil temperature sensor	
49	Fuel tank float, electric	
50	Pop-up headlamp relay	
51	Cold start valve relay	
52	Headlamp flasher	
53	Additional headlamp relay	
54	Heated rear window relay	Optional
56	Windshield wiper motor	
57	Washer pump	
58	Standard horn	
59	Cigar lighter	
60	Fuse box	
62	Motor for pop-up headlamps	
63	Blower	
64	Heated rear window	Optional