



A ENGINE CONTROL UNIT 	B CYL 3 FUEL INJECTOR 	E TS2 CYLINDER HEAD TEMP SENSOR 	H DISTRIBUTOR TRIGGER SWITCH 	K TTS THERMOTIME SWITCH 	N VOLTAGE REGULATOR PLATE 	
	C CYL 4 FUEL INJECTOR 	F FI HARNESS GROUNDS 	I CSV COLD START VALVE 	L CYL 1 FUEL INJECTOR 		
	D MPS MANIFOLD PRESSURE SENSOR 	G TS1 AIR TEMP SENSOR 	J TPS THROTTLE POSITION SWITCH 	M CYL 2 FUEL INJECTOR 		