



<b>A</b> ENGINE CONTROL UNIT 	<b>B</b> CYL 3 FUEL INJECTOR 	<b>E</b> T52 CYLINDER HEAD TEMP SENSOR 	<b>H</b> DISTRIBUTOR TRIGGER SWITCH 	<b>K</b> TTS 32 THERMOTIME SWITCH 	<b>N</b> VOLTAGE REGULATOR PLATE 	
	<b>C</b> CYL 4 FUEL INJECTOR 	<b>F</b> FI HARNESS GROUNDS 	<b>I</b> CSV COLD START VALVE 	<b>L</b> CYL 1 FUEL INJECTOR 		
	<b>D</b> MPS MANIFOLD PRESSURE SENSOR 	<b>G</b> T51 AIR TEMP SENSOR 	<b>J</b> TPS THROTTLE POSITION SWITCH 	<b>M</b> CYL 2 FUEL INJECTOR 		