


Electric wiring diagram (Part I) Type 914, Model 73 - USA

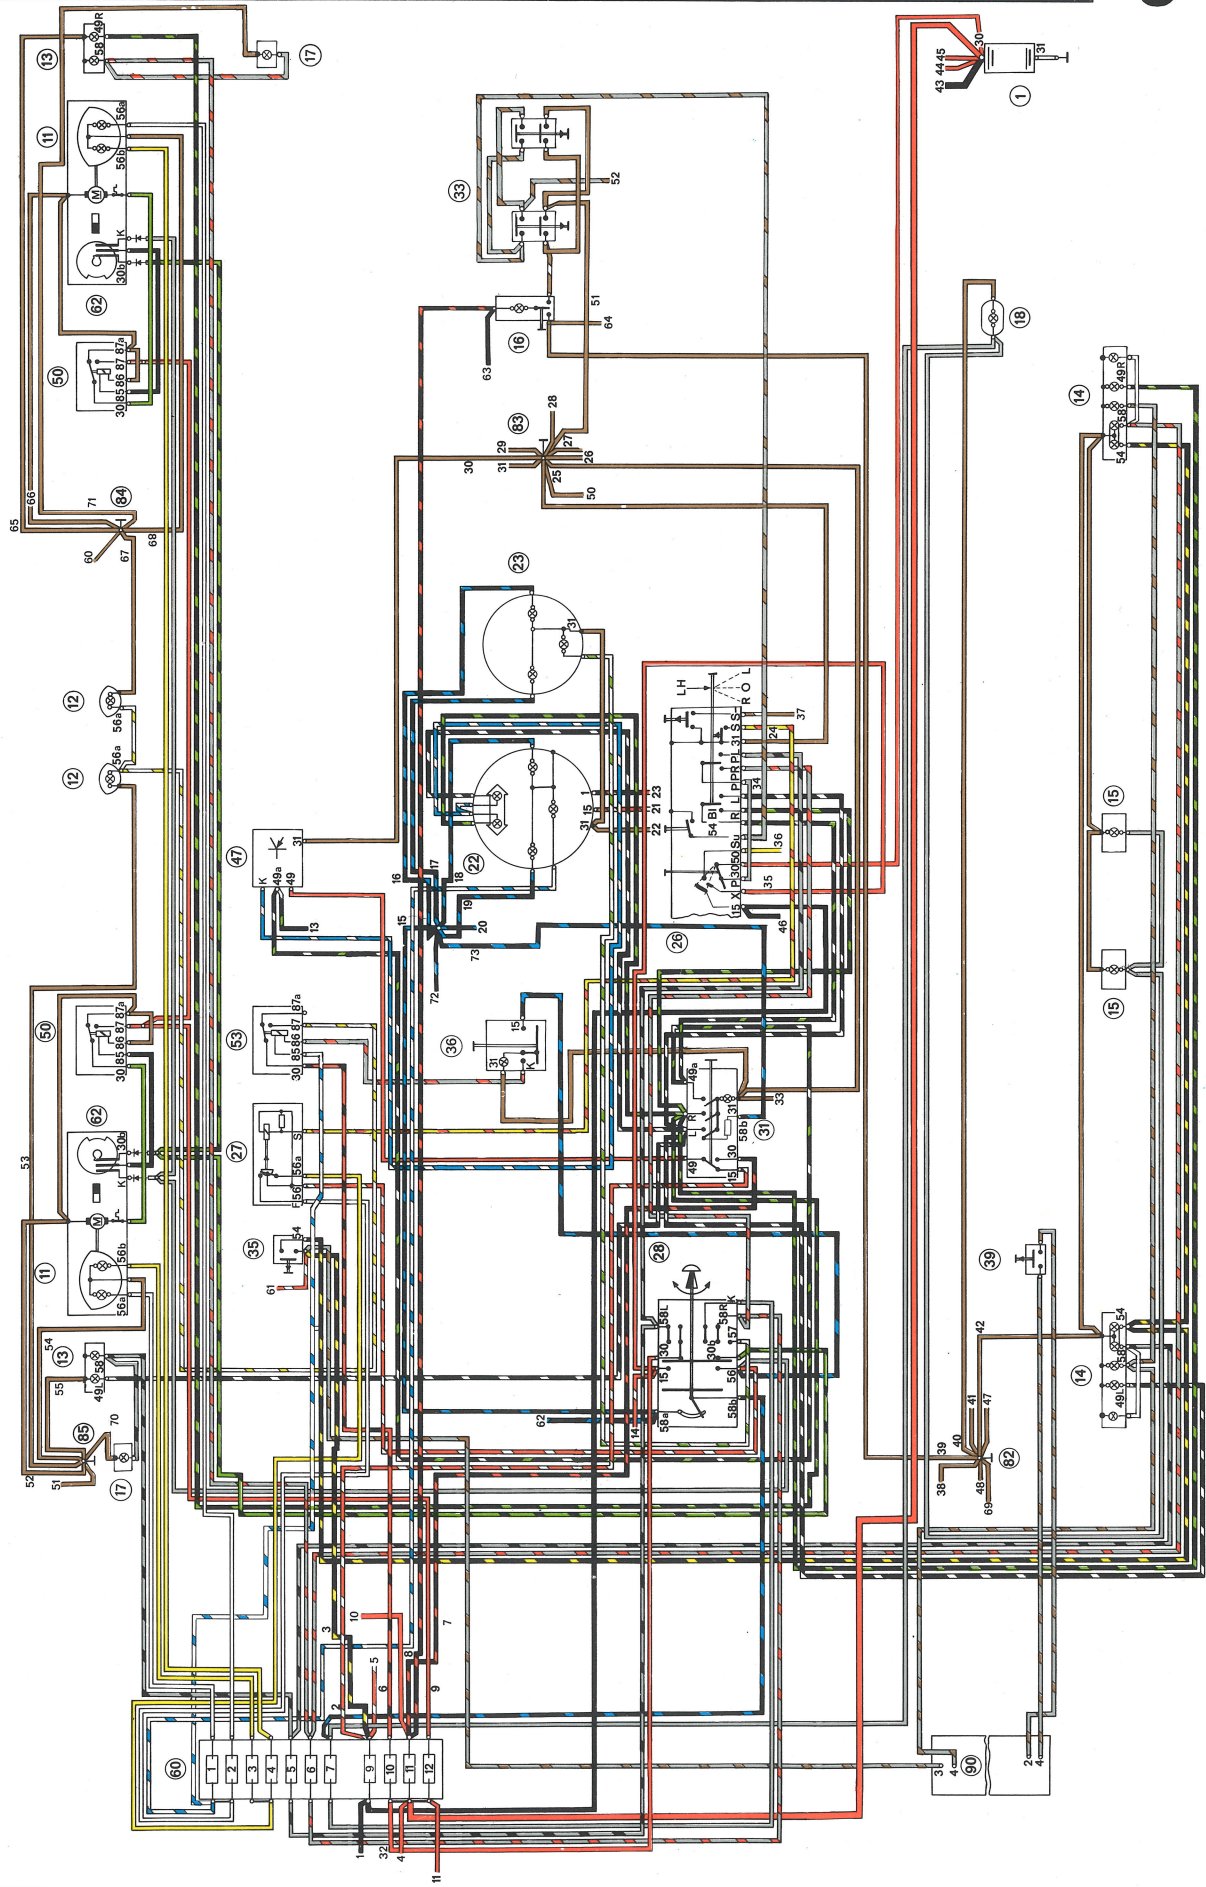


- 1 Battery
- 11 Headlights
- 12 Fog lights (optional)
- 13 Turn signal and parking lights
- 14 Tail, stop, turn, back-up and side marker lights
- 15 License plate light
- 16 Interior light
- 17 Side marker lights
- 18 Rear luggage compartment light
- 22 Tachometer
- 23 Speedometer
- 26 Steering column switch
- 27 Combination relay
- 28 Light switch
- 31 Emergency flasher switch

- 33 Door contact switch with buzzer contact
- 35 Stop light switch
- 36 Fog light switch (optional)
- 39 Back-up light switch
- 47 Turn signal/emergency flasher unit
- 50 Retractable headlight relay
- 53 Fog light relay (optional)
- 60 Fuse box
- 62 Retractable headlight motor
- 82 Ground connection point A
- 83 Ground connection point B
- 84 Ground connection point C
- 85 Ground connection point D
- 90 Regulator plate

- FUSES:
- 1 High beam, left
- 2 High beam, right
- 3 Low beam, left
- 4 Low beam, right
- 5 Parking light, left
- 6 Parking light, right
- 7 License plate light
- 9 Stop, turn and back-up lights
- 10 (Fog lights)
- 11 Interior light, warning light, buzzer
- 12 Retractable headlight motor

CAUTION!
Do not disconnect battery while the engine is running as this will damage the alternator.

Electric wiring diagram (Part II) Type 914, Model 73 - USA

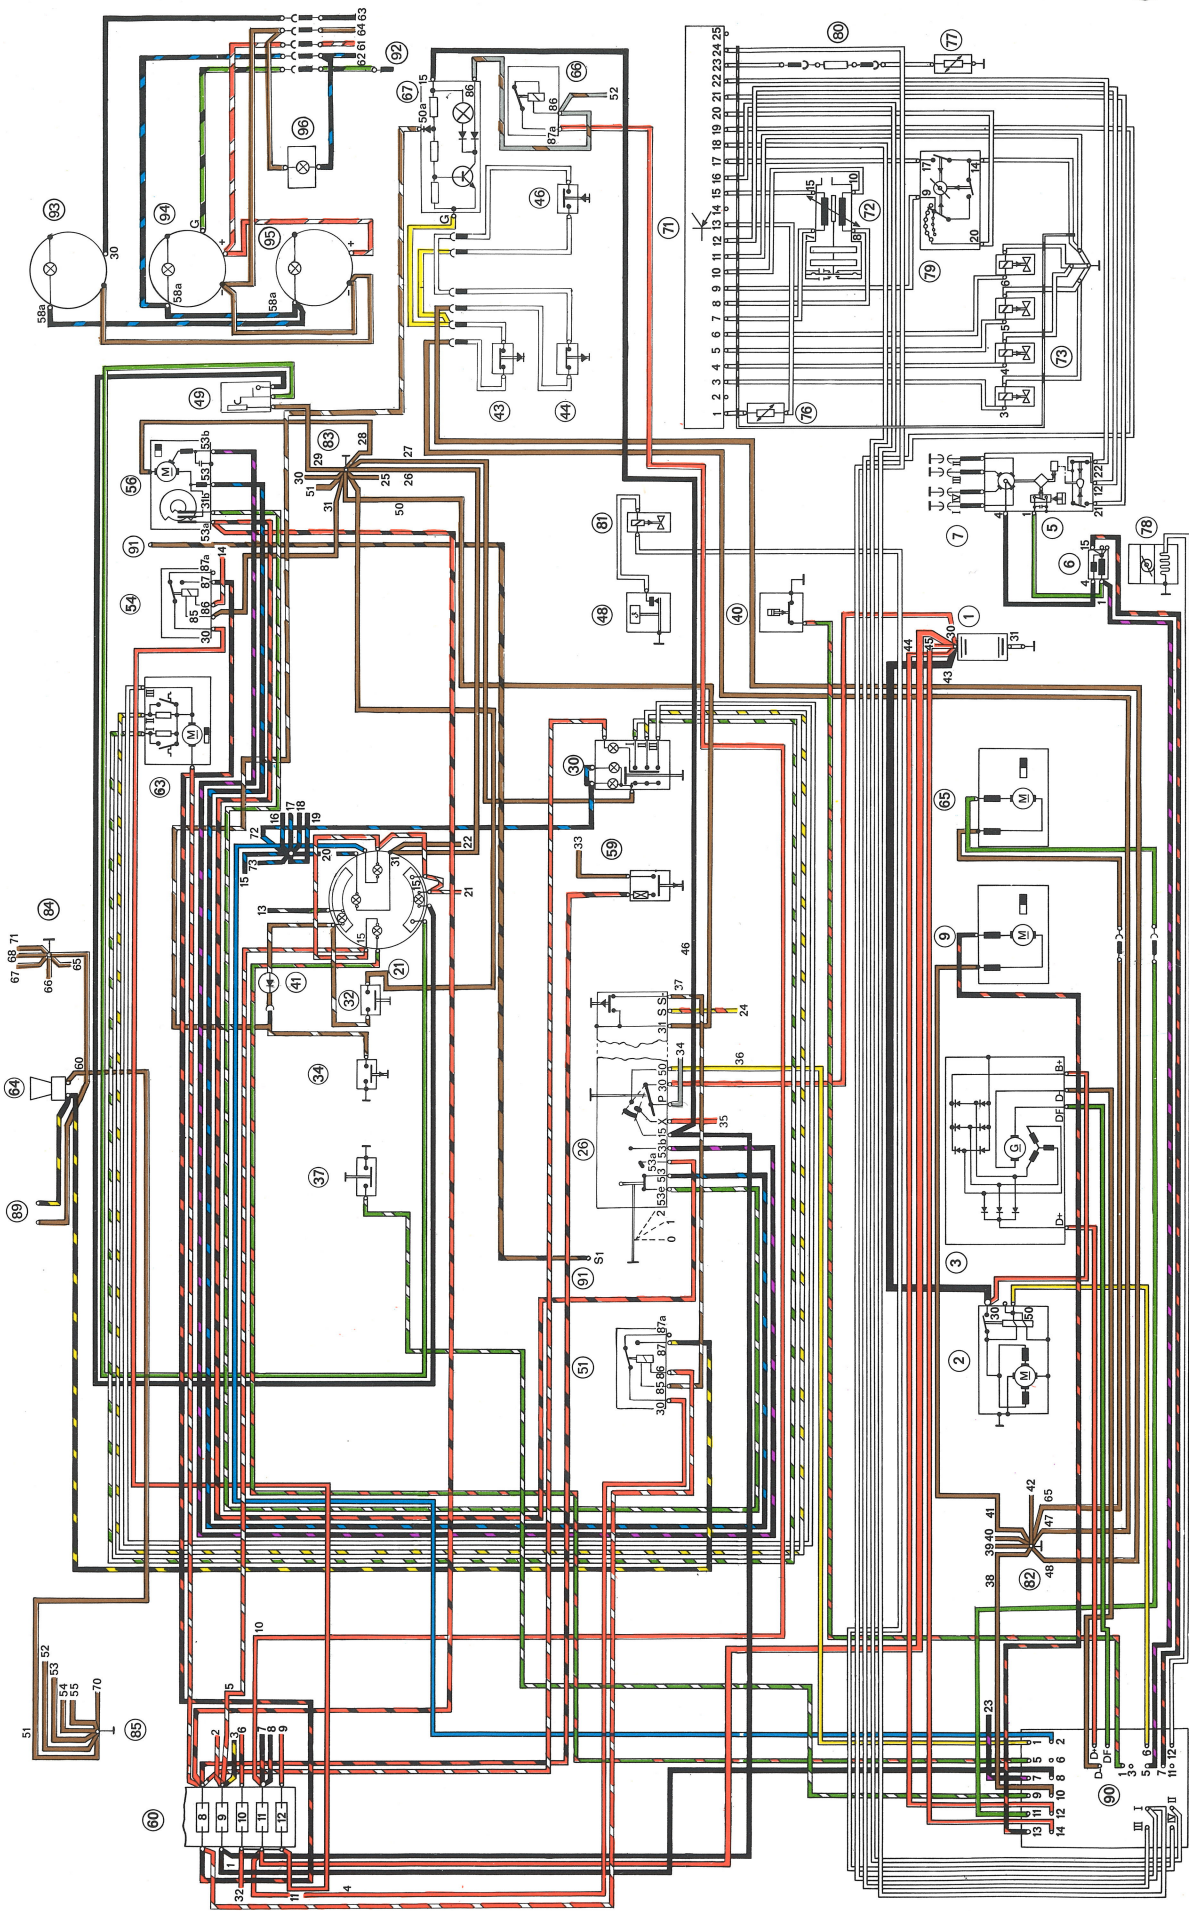

- 1 Battery
- 2 Starter
- 3 Alternator
- 5 Distributor
- 6 Ignition coil
- 7 Spark plugs
- 9 Fuel pump
- 21 Fuel gauge
- 26 Steering column switch
- 30 Fan switch
- 32 Brake warning light switch
- 34 Parking brake contact
- 37 Heater fan switch
- 40 Oil pressure switch
- 41 Diode
- 43 Safety belt contact, driver side
- 44 Safety belt contact, passenger side
- 46 Seat contact, passenger side
- 48 Thermo-switch

- 49 Fuel level sending unit
- 51 Horn relay
- 54 Relay for fresh air fan
- 56 Wiper motor
- 59 Cigarette lighter
- 60 Fuse box
- 63 Fresh air fan
- 64 Horn
- 65 Heater fan
- 66 Buzzer
- 67 Safety belt warning light
- 71 Electronic control unit (fuel injection)
- 72 Pressure sensor
- 73 Injection valve (electric)
- 76 Temperature sensor I
- 77 Temperature sensor II
- 78 Supplementary air valve
- 79 Throttle valve switch
- 80 Resistor


- 81 Cold start valve
- 82 Ground connection point A
- 83 Ground connection point B
- 84 Ground connection point C
- 85 Ground connection point D
- 89 Optional horn
- 90 Regulator plate
- 91 Windshield wiper interval relay (optional)
- 92 Oil temperature indicator (optional)
- 93 Electric clock (optional)
- 94 Oil temperature gauge dial (optional)
- 95 Voltmeter (optional)
- 96 Illumination for heating lever

- FUSES:**
- 8 Fresh air fan, horn, windshield wipers, cigarette lighter
 - 9 Stop, turn and back-up lights
 - 10 (Fog lights)
 - 11 Interior light, warning light, buzzer
 - 12 Retractable headlight motor

CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.

Electric wiring diagram (Part III) Type 914, Model 73

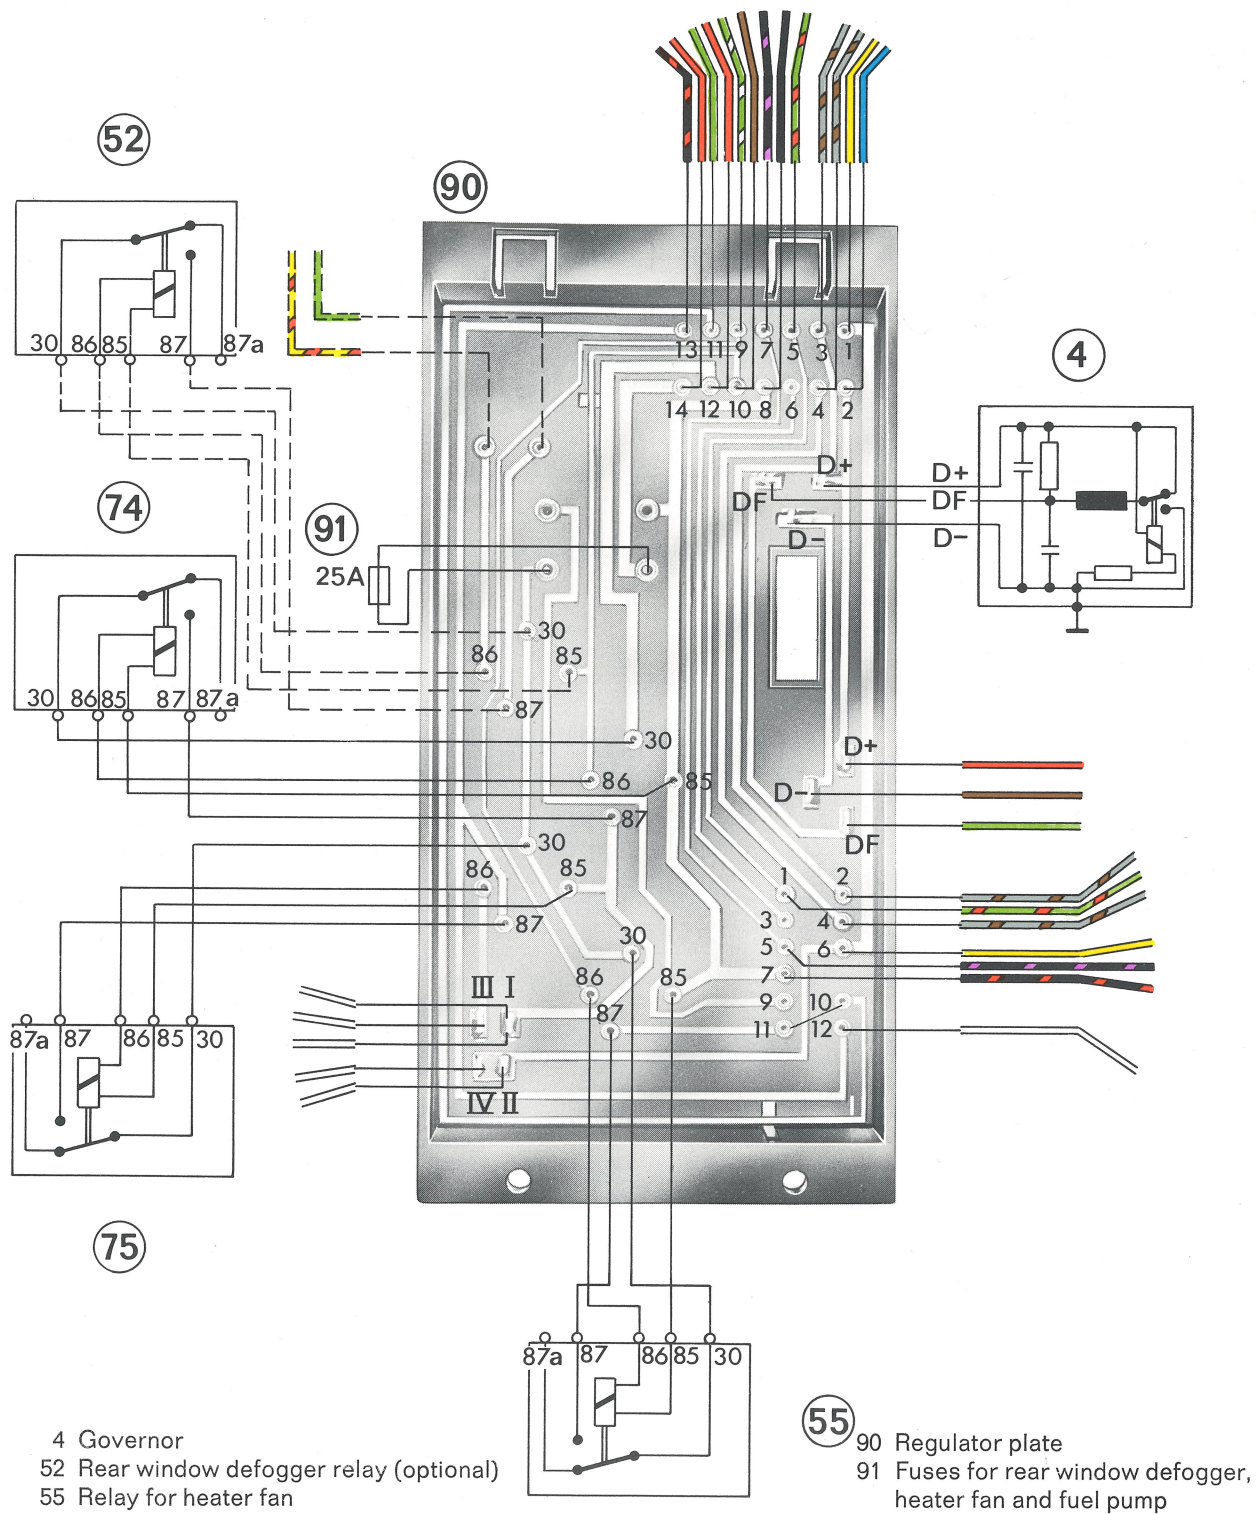

CAUTION!

Do not disconnect battery while the engine is running as this will damage the alternator.