Elektrischer Schaltplan 914

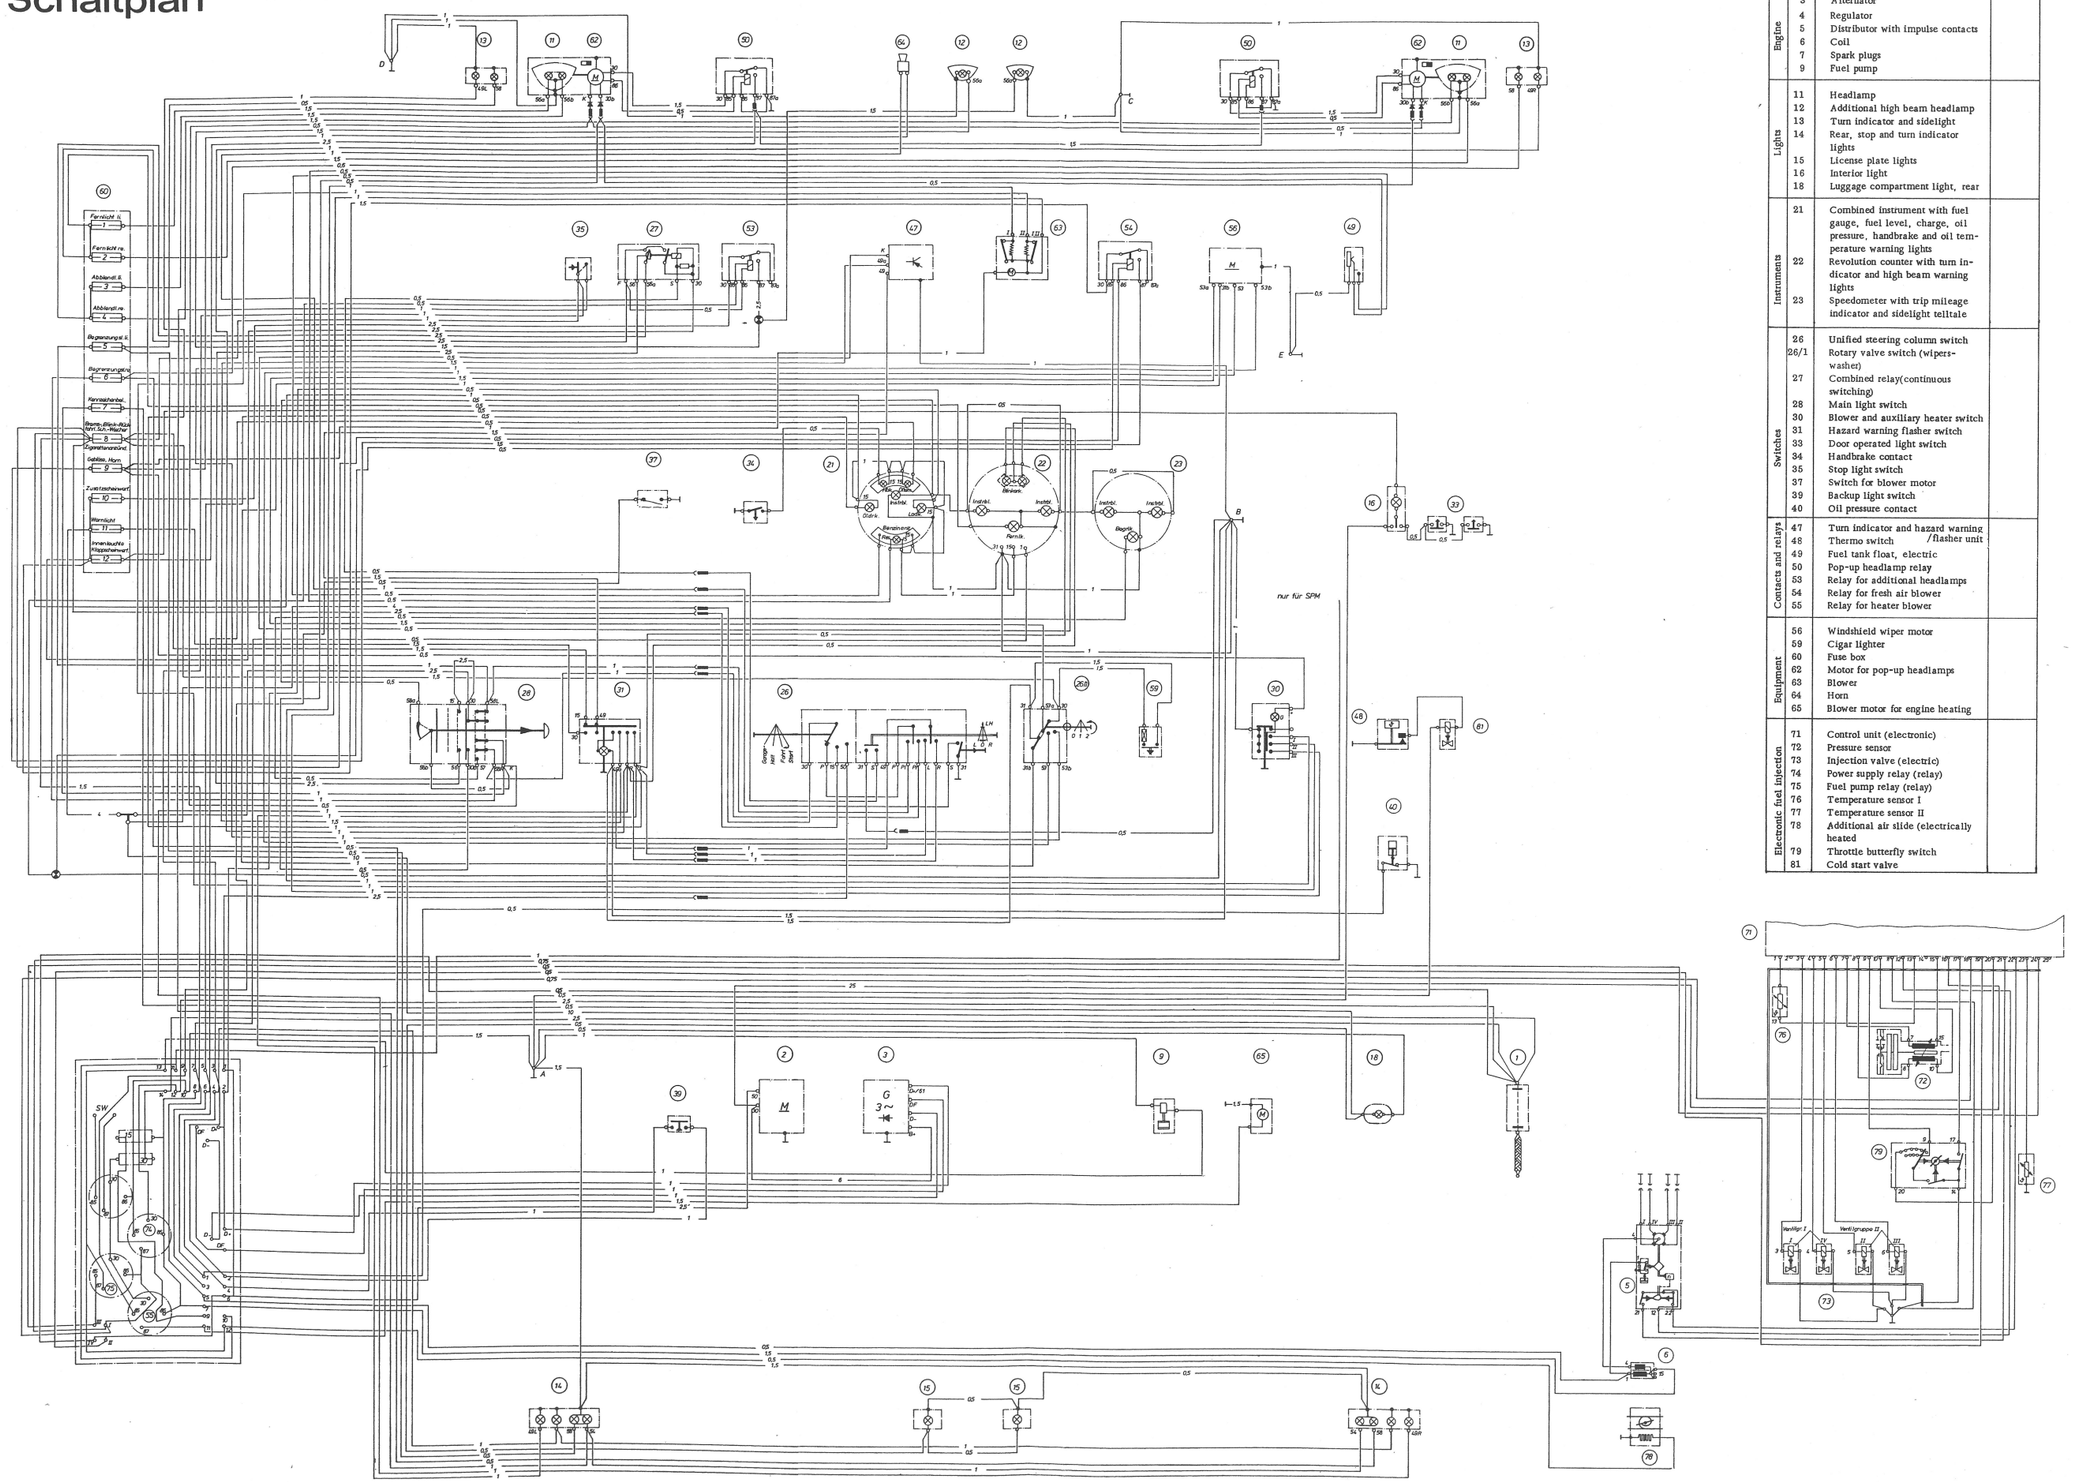

ELECTRICAL WIRING DIAGRAM 914

	No.	Description	Remarks
Engine	1	Battery	
	2	Starter	
	3	Alternator	
	4	Regulator	
	5	Distributor with impulse contacts	
	6	Coil	
	7	Spark plugs	
	9	Fuel pump	
Lights	11	Headlamp	
	12	Additional high beam headlamp	
	13	Turn indicator and sidelight	
	14	Rear, stop and turn indicator lights	
	15	License plate lights	
	16	Interior light	
	18	Luggage compartment light, rear	
Instruments	21	Combined instrument with fuel gauge, fuel level, charge, oil pressure, handbrake and oil temperature warning lights	
	22	Revolution counter with turn indicator and high beam warning lights	
	23	Speedometer with trip mileage indicator and sidelight telltale	
Switches	26	Unified steering column switch	
	26/1	Rotary valve switch (wipers-washer)	
	27	Combined relay(continuous switching)	
	28	Main light switch	
	30	Blower and auxiliary heater switch	
	31	Hazard warning flasher switch	
	33	Door operated light switch	
	34	Handbrake contact	
	35	Stop light switch	
	37	Switch for blower motor	
	39	Backup light switch	
	40	Oil pressure contact	
Contacts and relays	47	Turn indicator and hazard warning flasher unit	
	48	Thermo switch	
	49	Fuel tank float, electric	
	50	Pop-up headlamp relay	
	53	Relay for additional headlamps	
	54	Relay for fresh air blower	
	55	Relay for heater blower	
Equipment	56	Windshield wiper motor	
	59	Cigar lighter	
	60	Fuse box	
	62	Motor for pop-up headlamps	
	63	Blower	
	64	Horn	
	65	Blower motor for engine heating	
Electronic fuel injection	71	Control unit (electronic)	
	72	Pressure sensor	
	73	Injection valve (electric)	
	74	Power supply relay (relay)	
	75	Fuel pump relay (relay)	
	76	Temperature sensor I	
	77	Temperature sensor II	
	78	Additional air slide (electrically heated	
	79	Throttle butterfly switch	
	81	Cold start valve	