



Clean and reuse your existing 3-pole alternator connector housing

1. Both ends of Brown-Green-Red cable are inserted the same into each housing
2. Insert wire terminal until it click-locks

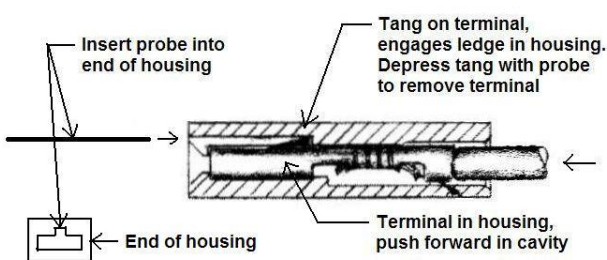

Remove existing harness terminals from housing

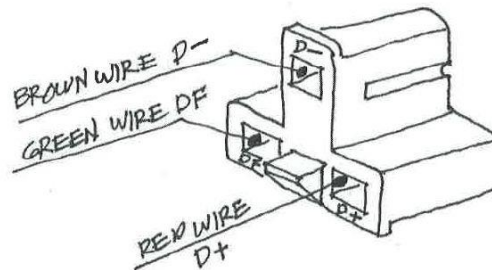

Insert new harness terminals into housing

# Alternator Harness

1970-76 Porsche 914/4, D-Jet/L-Jet