



1974 VW 412 FUEL INJECTION HARNESS
ZDR WAGON: AUTO TRANSAXLE

1974 VW 412
2 DR WAGON
AUTO TRANSAXLE

Ⓐ ECU

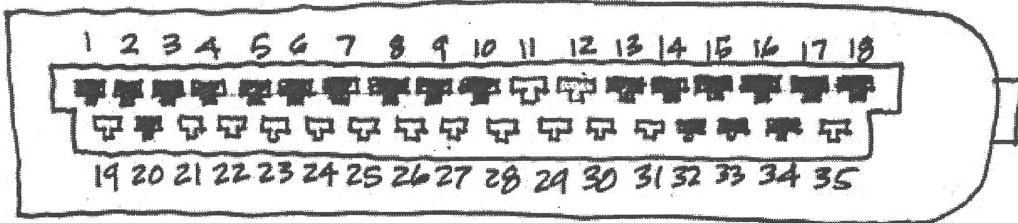


Ⓒ DOUBLE RELAY

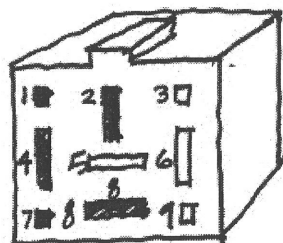

CAVITY	1	2	3,5,6,9	4	7	8
CIRCUIT	20 30	37	EMPTY	39	4 46	10 43

Ⓓ COIL = 1

Ⓔ RESISTOR 47
PACK

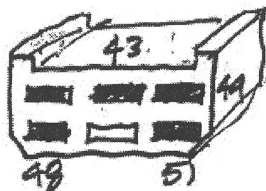

Ⓕ FUEL INJECTOR - CYL 3

48 [] 15

Ⓖ FUEL INJECTOR - CYL 4

47 [] 33

Ⓗ CYL. HEAD TEMP SENDER = 13

Ⓙ GROUND - GANGED = 16,17

Ⓚ GROUND - SINGLE = 5

Ⓛ COLD START VALVE (BLUE)


46/50 [] 45

Ⓝ THERMOTIME SWITCH (BROWN)

45 [] 50

Ⓜ AUX. AIR VALVE - (BLACK)
37 [] 34

Ⓟ THROTTLE POSITION SWITCH



Ⓠ FUEL INJECTOR - CYL 1

51 [] 14

Ⓡ FUEL INJECTOR - CYL 2

32 [] 49

Ⓢ AIR FLOW METER



39 36 6 9 8 7
IDLE
CONTACTS

CIRCUITS NOT USED

11,12,19 40-42,44

21-31

35,38 51 LAST CIRCUIT