

Volkswagenwerk AG



Troubleshooting Guide

**for Engines with
Electronic Fuel Injection
MPC (manifold pressure controlled)**

Type 3/all
Type 4/Manual Transmission
Type 4/Automatic Transmission
(up to Oct. 1973)

Contents

Starting trouble

- Engine does not start
- Cold engine does not start
- Hot engine does not start
- Engine starts but stops again after a short time

Idling trouble

- Rough idle during warm-up
- Hunting (surging) at idle at all temperatures
- Hot engine stalls at idle
- Rough idle in driving range, (Automatic Transmission)
- Idle irregular (like misfiring)
- Idle too high

Hesitation trouble

Poor output, top speed too low

Fuel consumption too high

Engine misfiring

- Misfiring only when electrical components are switched on
- Misfiring at all times

CO value too high

Wiring diagrams

Starting trouble

Idling trouble

Hesitation trouble


Poor output/
top speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

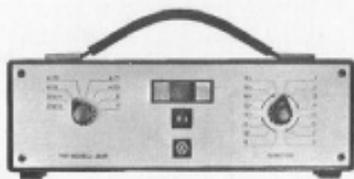

VW 1218
(ASE 000050)

Introduction


Start here

How does this troubleshooting guide work?

Together with the necessary equipment – mainly the VW 1218 tester – this guide should help you to locate trouble in the fuel injection system quickly


Finding your way

- Step 1:** Verify the complaint. Check the customer complaint to determine if a problem really exists. Road test, and if possible have the customer show you what happens. If the problem exists, note the symptoms.
- Step 2:** Find symptom on contents page
- Step 3:** Follow arrow to thumb index, from there to the right page

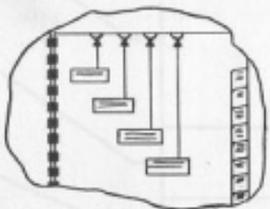

How to check

- Step 1:** Be sure test conditions check out OK
- Step 2:** Upper box lists most probable trouble. Start to check here first.
- Step 3:** Result of check guides you to next box or arrow until trouble is found and corrected.

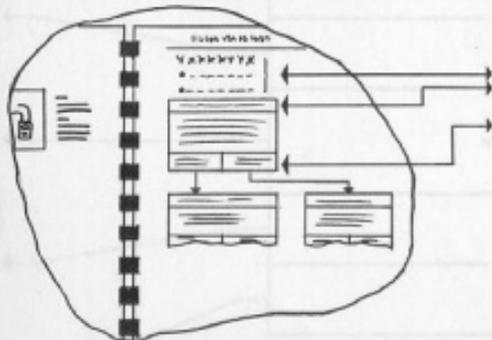

Engine does not start

Cold engine does not start

Hot engine does not start

Engine starts but stops again after a short time

Starting trouble

Idling trouble

Hesitation trouble

Low output/
low speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Note

Following defects may be found despite visible sparking at spark plug connectors:


- Distributor cap (damp, cracked, burnt by tracking)
- Rotor defective
- Loose connections on coil
- Spark plugs or connectors defective
- Ignition timing incorrect (breaker points)
- Ignition cables poorly connected
- Arcing at ignition cables on distributor (through the rubber caps)
- Voltage at terminal 15 on coil too low (minimum = 9 volts)
- Condenser defective



Check cold start valve for sealing

Note

- Detach cold start valve from intake air distributor but leave it connected to ring main.
- Switch ignition on and off several times and check if fuel is delivered.

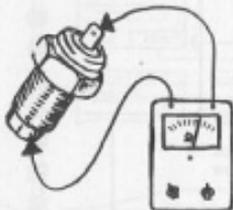

Note

Thermoswitch should not show any continuity above specified cut-in temperature.

Cut-in temperatures are:

- 311 906 161 = -12 to -18°C (10 to 0°F)
(Aug. 67 to July 69)
- 311 906 161A = 0 to +10°C (32 to 14°F)
(Aug. 69 to March 70)
- 311 906 161C = -6 to -14°C (21 to 7°F)
(from April 70)
- 311 906 161B = -2 to -8°C (28 to 18°F)
(Service use only up to March 70)

Engine does not start

Test conditions:

- Correct starting procedure.
- Fuel in tank.
- Starter is turning fast enough (battery voltage).

Faults in ignition system

Check ignition system and eliminate any defects.

Caution

Sparks at the plug connectors do not always indicate that ignition system is in order.

Engine does not start

Engine starts

Faults in fuel system

Check pressure in ring main with pressure gauge while starting. Specified pressure: 2.0 kg/cm² (28 psi).

Pressure builds up

No pressure

Engine floods due to defective cold start device

Possible troubles:

- Cold start valve leaking
- Thermoswitch not switching off at higher temperatures

Wrong combination of thermoswitch and control unit (see list of equipment in workshop manual)

No trouble

Trouble corrected, engine starts

Pump control defective

Switch ignition on several times; pump relay should operate audibly (clicking). Switch off again after about 1 second.

Relay works

Relay does not work

Starting trouble

Idle trouble

Heavily trouble


Low output/
top speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagrams

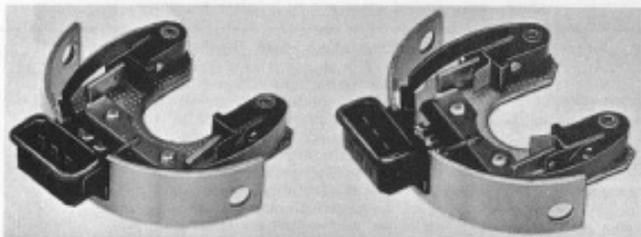

without deflector plate

with deflector plate

Note

On older vehicles the distributor trigger contacts with oil deflector can be service installed:

Introduced in production: July 1971

- Type 3 from Chassis No. 3112252242
- Type 4 from Chassis No. 4112059500

Engine does not start (cont'd from page 5)

Trouble in electrical part of injection system	
Connect tester VW 1218 and run through test program.	
No trouble	Trouble located and corrected

Clean or replace trigger contacts in distributor.

Starting trouble

Mixing trouble

Hesitation trouble



Low output
low speed too low

Fuel consumption too high


Engine misfiring

CO value too high

Wiring diagram

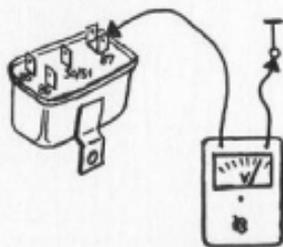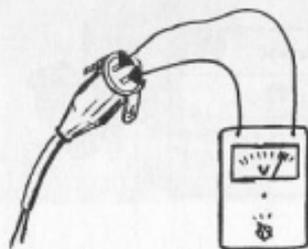

Engine does not start (cont'd from page 5)

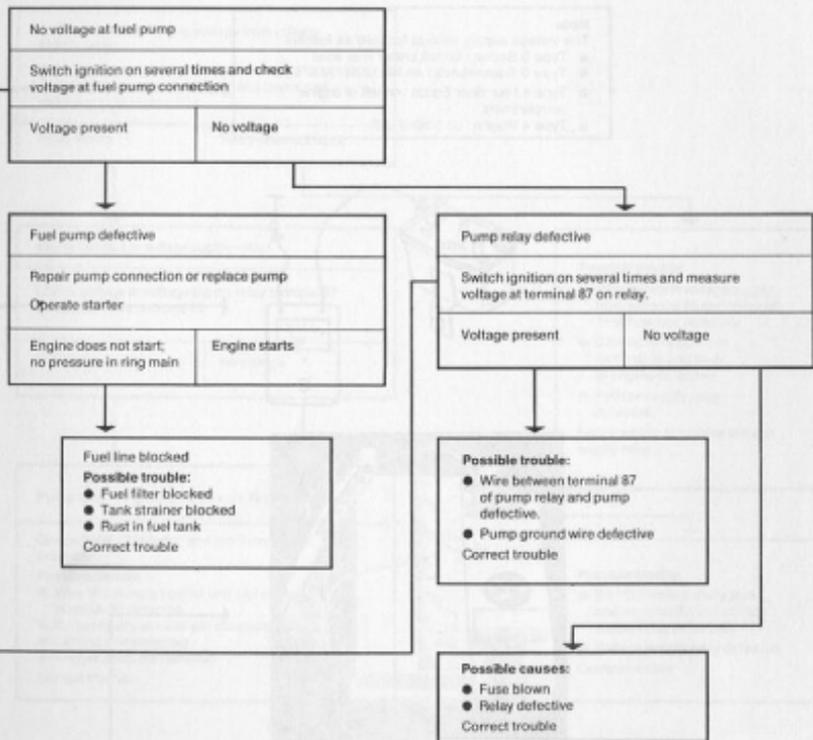

Starting trouble

Idling trouble

Hesitation trouble

no output!
top speed too low

Fuel consumption too high

Engine misfiring



Oil valve too high

Wiring diagram

Note

The voltage supply relay is located as follows:

- Type 3 Sedan: on left under rear seat
- Type 3 Squareback: on left under rear seat
- Type 4 Four door Sedan: on left of engine compartment
- Type 4 Wagon: on control unit

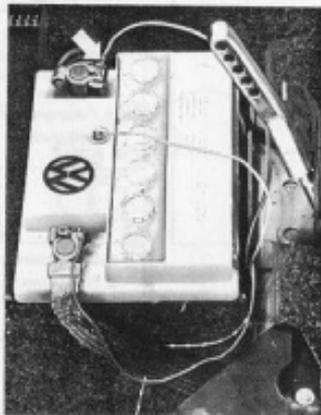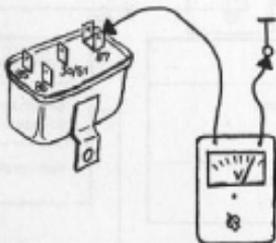

Engine does not start (cont'd from page 5)

Pump relay not receiving voltage from voltage supply relay	
Switch ignition on several times and check that voltage supply relay clicks.	
Relay works	Relay does not work

Faulty contact in voltage supply relay	
Check voltage at voltage supply relay terminal 87 and pump relay terminal 86.	
Voltage present	No voltage

Pump relay not grounded via wire 19 of control unit	
Connect VW 121B tester and run through test program	
Possible trouble <ul style="list-style-type: none"> ● Wire 18 between control unit and starter terminal 50 defective. ● No continuity at multi-pin connector ● Control unit defective ● Trigger contacts defective 	
Correct trouble	

Possible trouble <ul style="list-style-type: none"> ● Wire between voltage supply relay terminal 86 and terminal 15 in fuse box defective ● Ground wire between terminal 85 and body or engine defective. ● Voltage supply relay defective.
Repair wiring or replace voltage supply relay

Possible trouble <ul style="list-style-type: none"> ● Wire between battery plus and terminal 30/5 of voltage supply relay defective. ● Voltage supply relay defective.
Correct trouble

Starting trouble

Idling trouble

Hesitation trouble

Poor start

Low speed

Fuel consumption too high


Engine misfiring

CO value too high

Wiring diagram

Starting engine

- Gear shift lever in neutral
- Do not press accelerator pedal
This holds true for a cold engine and an engine at operating temperature no matter what the outside temperature is
- Switch on ignition and start engine
- At outside temperatures below 0°C (32°F) press clutch pedal before starting.

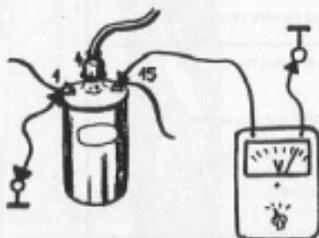

Cold engine does not start

Test condition:

- Fuel in tank

Incorrect starting procedure

Try to start engine using correct procedure
(in condition complaint was made)

Engine does not start or
is difficult to start

Engine starts normally

Battery voltage too low

Check state of battery charge; charge if necessary
or replace battery
Try to start engine again.

Engine does not start or
is difficult to start

Engine starts normally

Voltage at coil terminal 15 too low

Install additional wire from terminal 1 to ground.
Measure voltage at terminal 15 with voltmeter
while starter is operating.

Voltage is 9 volts
or more

Voltage is less than
9 volts

Advise customer on correct starting
procedure

Possible trouble

- Voltage drop in circuit from battery via light switch, ignition-starter switch to coil terminal 15.
- Poor ground connection between battery and body and between transmission and body.
- Starter current draw too high.
Correct trouble

Starting
trouble

Idling
trouble

Hesitation
trouble

no output


top speed
too low

Fuel con-
sumption
too high

Engine
misfiring

CO value
too high

Wiring
diagram

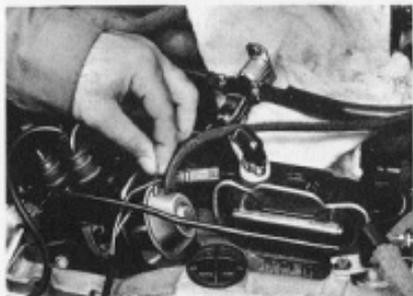

Test instructions:

Cold start valve and wiring:


- Detach cold start valve from intake air distributor but leave it connected to the ring main.
- Pull connector off thermostat and connect to ground.
- Pull wire off terminal 1 on coil
- Operate starter briefly and check if cold start valve injects fuel (catch fuel with rag).

Warning
Fire hazard

Thermostatic switch can only be tested at very low ambient temperatures or when switch has been cooled down to actuating temperature in a refrigerator.

Actuating temperatures:

- 311 906 161 = -12 to -18°C (10 to 0°F)
(Aug. 67 to July 69)
- 311 906 161A = 0 to +10°C (32 to 14°F)
(Aug. 69 to March 70)
- 311 906 161C = -6 to -14°C (21 to 7°F)
(from April 70)
- 311 906 161B = -2 to -8°C (28 to 18°F)
(For service installation only up to March 70)

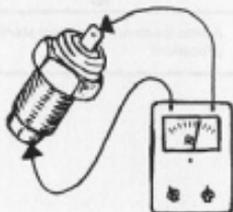

Trouble in cold start device

Possible trouble:

- Cold start valve wire detached from terminal 50 of solenoid.
- Wire detached from thermostwitch.
- Incorrect combination of thermostwitch and control unit. (see list of equipment in workshop manual)
- Cold start valve or thermostwitch defective.

Replace cold start valve or thermostwitch as required.

No trouble

Trouble found and corrected

Trouble in electrical part of injection system

Connect VW 1218 tester and run through test program.

Possible trouble:

- Control unit defective
- Temperature sensors I and II defective
- Pressure sensor defective
- Trigger contacts defective

Correct trouble

Starting trouble

Idling trouble

Hesitation trouble

Low output/
Idle speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Starting engine

- Gear shift lever in neutral
- Do **not** press accelerator pedal
This holds true for a cold engine and an engine at operating temperature no matter what the outside temperature is
- Switch on ignition and start engine
- At outside temperature below 0°C (32°F) press clutch pedal before starting

Cold engine does not start

Test conditions:

- Correct starting procedure being used
- Fuel in tank

Valve clearance incorrect

Adjust valves properly with **engine cold**.
Warm engine up and carry out starting tests.

Engine difficult
to start

Engine starts
normally

Pressure in ring main too high (mixture too rich)

Check pressure with gauge while operating starter
and set to 2 kg/cm^2 (28 psi) if necessary.
Try to start engine again.

Engine difficult
to start

Engine starts
normally

Control unit or pressure sensor making mixture too rich

Connect tester 1218 and run through test
program.
Correct trouble and try to start engine.

Engine difficult
to start

Engine starts
normally



Starting
trouble

Idling
trouble

Hesitation
trouble



over output/
top speed
too low

Fuel con-
sumption
too high

Engine
misfiring

CO value
too high

Wiring
diagram

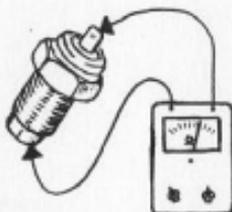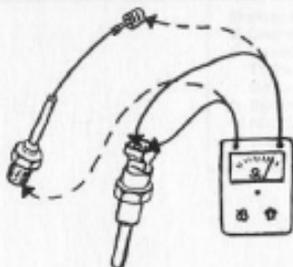


Note

The thermoswitch should not show any continuity above the specified switch-on temperature.

Actuating temperatures:

- 311 906 161 = -12 to -18°C (10 to 0°F)
(Aug. 67 to July 69)
- 311 906 161A = 0 to $+10^{\circ}\text{C}$ (32 to 14°F)
(Aug. 69 to March 70)
- 311 906 161C = -6 to -14°C (21 to 7°F)
(from April 70)
- 311 906 161B = -2 to -8°C (28 to 16°F)
(For service installation only up to March 70)

Hot engine does not start (cont'd from page 17)

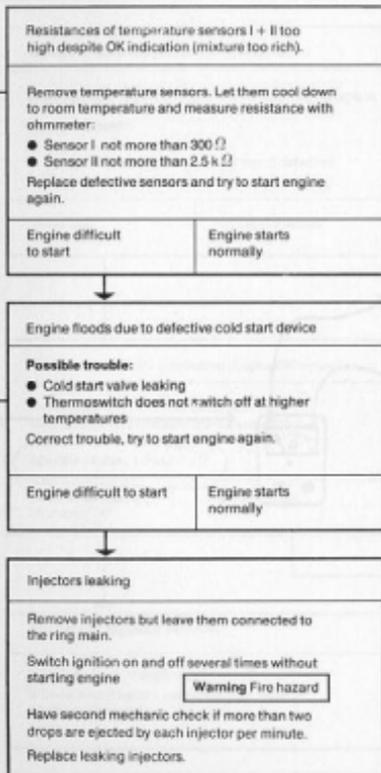

Starting trouble

Idling trouble

Hesitation trouble

Low output/
top speed too low





Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Engine starts but stops again after a short time

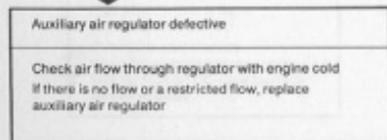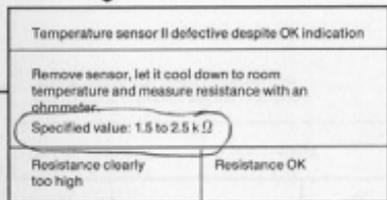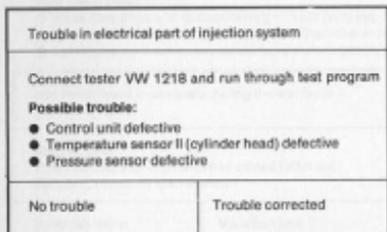

Starting trouble

Idling trouble

Hesitation trouble

Power output/low speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Rough Idle during warm-up

Test conditions:

- Valve clearance and ignition timing correct (very important).
- Idling speed of warm engine within specified tolerances.
- Let engine cool down to ambient temperature before starting test.

Idle enrichment inadequate during the warm-up phase	
Start engine. When auxiliary air regulator has closed (after 3-4 minutes), measure idle variation.	
Variation more than 100 rpm	Variation less than 100 rpm

Type 4
↓

Idling CO potentiometer setting too lean	
Turn potentiometer slowly clockwise until idle is normal (Variation less than 100 rpm)	
Idle OK	Idle still varying

Check that CO is not too high when engine is warm (50–70° C/122–158° F)
If the CO is considerably above the permissible maximum, look for fault in "CO value too high" section of guide

This variation is permissible and requires no repair work

Idle contact in throttle valve switch not in order

Possible trouble:

- Throttle valve switch incorrectly adjusted
- Wire 17 between throttle valve switch and control unit defective
- Throttle valve switch defective

Idling trouble

Hesitation trouble


or output/
top speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

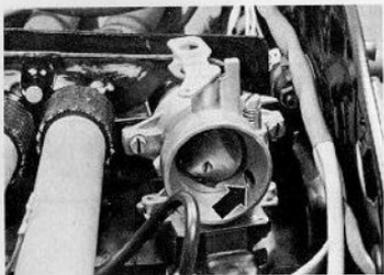

Hunting at idle at all temperatures







Note

This point concerns only vehicles with deceleration fuel cutoff

- Type 3 up to Chassis No. 311 2 500 000
- Type 4 up to Chassis No. 411 2 100 000

Test condition:

- Engine warm (50–70°C/122–158°F)
- Engine running at idle

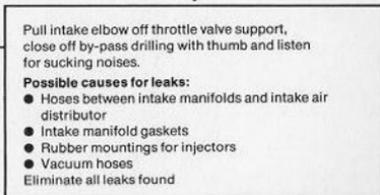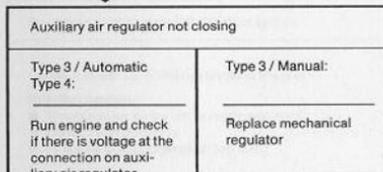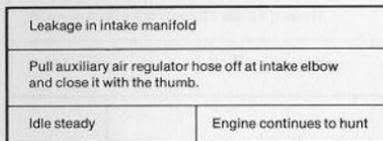

Idling trouble

Hesitation trouble

noor output/
top speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Hot engine stalls at Idle

Test condition

- Engine cold

Valve clearance incorrect

Check clearance and – if necessary – set exactly (very important).

Warm up engine and check if it will idle properly

Engine stalls

Engine idles properly

Trouble in electrical part of injection system

Connect tester 1218 and run through the guide

Possible trouble:

- Throttle valve switch incorrectly adjusted
- Control unit defective
- Pressure sensor defective (too lean)

Correct trouble

Idling
trouble

Hesitation
trouble


oor output/
top speed
too low

Fuel consumption
too high

Engine
misfiring

CO value
too high

Wiring
diagram

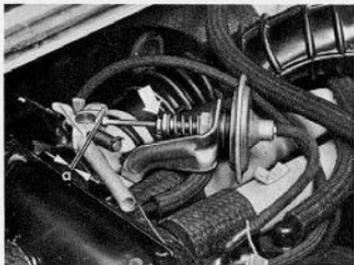

Note

Engine oil temperature must be 50–70°C (122–158°F).

Regulator must be adjusted with engine running.

Adjustment

1 – Set idle to 850–900 rpm.

2 – Apply parking brake and select driving range.

In this condition idle should be approximately 600–700 rpm. Play at “a” should be 0.5–1.0 mm (0.02–0.04 in.)

3 – Adjust play as required on M 5 screw (arrow).

Idling speed regulator
(only Type 4/Automatic Transm.)

Uneven idle in driving range (Automatic Type 4)

Test conditions:

- No variation in idle with lever at "N"
- Idle speed with engine warm 850–900 rpm

Idling speed regulator incorrectly adjusted

Check adjustment and correct if necessary

Idle still uneven

Idle OK

Install regulator with softer spring.

Production: From Engine No.
W 0 105 249

Idling
trouble

Hesitation
trouble

poor output/

top speed
too low

Fuel con-
sumption
too high

Engine
misfiring

CO value
too high

Wiring
diagram



- 1 – Pressure sensor connector
- 2 – Connector for temperature sensor II
- 3 – Connectors for injectors.

Note

The area near the plug connector for No. 3 cylinder on the Type 4/Wagon is particularly critical.

Repair Instructions:

- a – Pull wires off pressure sensor, temperature sensor II (cylinder head) and injectors for cylinders 3 and 4
- b – Route wiring behind fuel line on pressure regulator (see illustration).
- c – Connect wires again.

Idle irregular (like misfiring)

Test conditions:

- Engine warm (50°–70°C/122–158°F)
- Engine running at idling speed

Inductance from ignition system	
Check if the injection system wiring is coming into contact with the high tension ignition cables (see instructions on left)	
Route wiring so that it is as far as possible from ignition cables	
Idle still irregular	Idle OK

Trouble occurs only when heater is switched on	
Switch heater off and watch idle	
Idle still irregular	Idle OK when heater is switched off

Inductance from some other source	
Possible trouble:	
● Powerful radio station in immediate vicinity	
● Two-way radio on vehicle near engine	
No remedy normally required	

Trouble in heater electrical system	
Possible cause:	
● Defective condenser in combustion air blower	
Replace combustion air blower.	

Idling trouble

Hesitation trouble

oor output/
top speed too low

Fuel consumption too high

Engine misfiring

CD valve too high

Wiring diagram

1. Connect the ignition coil to the spark plug.

2. Turn the engine over by hand.

3. Observe the spark plug gap and adjust it if necessary.

4. Repeat the procedure for all the other cylinders.

5. Check the spark plug gap again.


6.

7. Turn the engine over by hand again.

8. Observe the spark plug gap and adjust it if necessary.

9. Repeat the procedure for all the other cylinders.

10. Check the spark plug gap again.

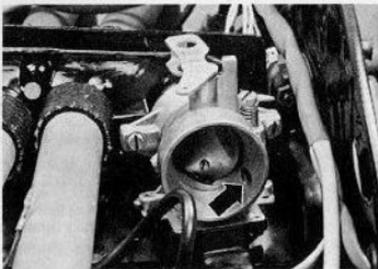

Idle too high

Test conditions:

- Engine warm (50–70°C/122–158° F)
- Tachometer connected
- Engine running at idle

Throttle valve not closing	
Press throttle valve with thumb to see if it is fully closed and watch idle	
Idle does not drop	Idle drops

Adjusting screw out of adjustment	
Adjust idle by turning screw	
Idle cannot be set properly	Idle can be adjusted

Auxiliary air regulator not closing	
Pull regulator hose off at intake elbow and seal with thumb.	
Idle does not drop	Idle drops

Pull intake elbow off throttle valve connection. Close idling by-pass drilling with thumb and listen for suction noises.	
Possible sources of leakage:	
● Hoses between intake pipes and intake air distributor	
● Intake pipe gaskets on cylinder head	
● Rubber mountings for injectors	
● Vacuum hoses	
● Crankcase ventilation valve or hose to intake air distributor defective	
Eliminate any leaks.	

Throttle valve sticking
Possible trouble:
● Throttle controls stiff (accelerator cable or pedal)
● Throttle shaft stiff in operation
● Throttle valve switch incorrectly adjusted
● Throttle valve switch base plate bent
Correct trouble

Idling trouble

Hesitation trouble


Poor output/top speed too low

Fuel consumption too high

Engine misfiring

CD valve too high

Wiring diagram

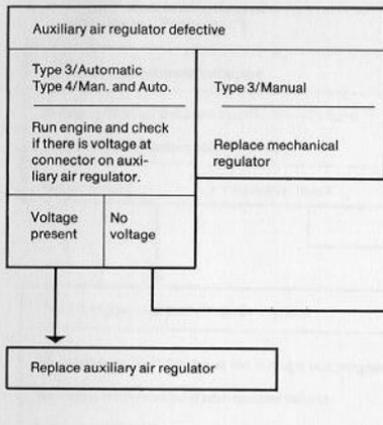

Idling trouble

Hesitation trouble

Low output/ top speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Hesitation trouble

Test condition:

- Vehicle reaches maximum speed (otherwise see "Poor output")

Acceleration enrichment ineffective	
Switch ignition on and open throttle slowly by hand.	
Listen whether injectors click (20 times)	
Clicking heard	No clicking heard

Trouble in electrical part of injection system	
Connect tester VW 1218 and run through test program	
Correct any trouble found and road test vehicle	
Progression still not satisfactory	Performance on road test OK

Mechanical trouble in pressure sensor	
Check by using a new pressure sensor and road test vehicle again.	
Progression still not satisfactory	Performance on road test OK

Wires on throttle valve switch faulty or switch defective
Check wiring connections and repair as necessary, otherwise replace switch.

Hesitation trouble


oor output/
top speed too low

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

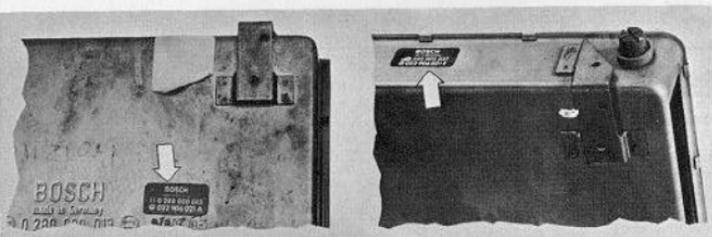

1. The component is a Bosch battery housing, model 11 020 900 001. It is made of metal and is used to house the battery cells. The component is shown in two views: a front view and a side view. The front view shows the top of the housing, and the side view shows the side of the housing. The component is shown in a damaged state, with a jagged tear on the left side. The tear is located on the top edge of the housing, and it is approximately 2 inches long. The tear is jagged and irregular, and it appears to have been caused by a sharp object. The component is shown in a light-colored background, and the text is printed in a dark color.

2. The component is a Bosch battery housing, model 11 020 900 001. It is made of metal and is used to house the battery cells. The component is shown in two views: a front view and a side view. The front view shows the top of the housing, and the side view shows the side of the housing. The component is shown in a damaged state, with a jagged tear on the left side. The tear is located on the top edge of the housing, and it is approximately 2 inches long. The tear is jagged and irregular, and it appears to have been caused by a sharp object. The component is shown in a light-colored background, and the text is printed in a dark color.

3. The component is a Bosch battery housing, model 11 020 900 001. It is made of metal and is used to house the battery cells. The component is shown in two views: a front view and a side view. The front view shows the top of the housing, and the side view shows the side of the housing. The component is shown in a damaged state, with a jagged tear on the left side. The tear is located on the top edge of the housing, and it is approximately 2 inches long. The tear is jagged and irregular, and it appears to have been caused by a sharp object. The component is shown in a light-colored background, and the text is printed in a dark color.

Hesitation trouble (cont'd from page 39)

Incorrect matching of control unit and temperature sensor (mixture too weak)

Check matching

The service temperature sensors I (311 906 081 B) and II (022 906 041 A) must not be installed in vehicles which have control units with yellow, brown or black stickers

Parts match

Parts do not match

Defect in ignition system

Possible trouble:

- Contact breaker
- Ignition timing
- Spark advance settings
- Spark plug gaps

Correct trouble

Install correct temperature sensor as shown in list of equipment in workshop manual.

Road testing instructions:

- Increase tire pressures to 3 psi above normal tire pressure
- Engine and transmission must be warm
- Level, dry asphalt road surface
- Normal wind conditions
- Take average readings from one run in each direction
- Check maximum speed where legally permitted on a measured test stretch (1 mile) with a stop watch
- Find actual speed from table below and compare with speedometer to find variation

Speed table
— for 1 mile stretch

Seconds	mph
58	62
55	65
52	69
48	75
45	80
43	85
40	90
38	95
36	100

Possible trouble in ignition system:

- Distributor cap (damp, cracked, burnt by tracking)
- Rotor defective
- Ignition timing incorrect (breaker points)
- Condenser defective
- Loose connections on coil
- Ignition cables poorly connected
- Spark plugs or connectors defective
- Centrifugal spark control defective
- Arcing at ignition cables on distributor (through protective caps)

Poor output / top speed too low

Test conditions:

- Speedometer reading normal (see instructions on left)
- Tire size and type equivalent to standard
- Wheels turning freely (brakes, bearings)

Faulty engine adjustment

Procedure:

- Check valve clearance with engine cold and adjust if necessary
- Check accelerator cable adjustment. (Throttle must be fully open with pedal at full throttle).
- On Type 4 up to model year 71: Check that crankcase ventilation control flap moves freely.
- Check ignition timing and adjust if necessary.

No trouble

Trouble corrected

Troubles in ignition system

Check ignition system and eliminate any faults found.

Caution

Visible sparks do not always prove that the ignition system is in order (see remarks on left).

No trouble

Trouble corrected

Road test

Output poor

Output O.K.

Road test

Output poor

Output O.K.


Poor output/
top speed
too low

Fuel con-
sumption
too high

Engine
misfiring

CO value
too high

Wiring
diagram

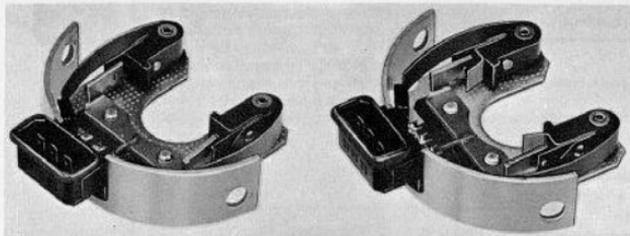

without deflector plate

with deflector plate


Note

On older vehicles the distributor trigger contacts with oil deflector can be service installed.

Introduced in production: July 1971

- Type 3 from Chassis No. 311 2 252 242
- Type 4 from Chassis No. 411 2 059 500

Poor output / Top speed too low (cont'd from page 43)

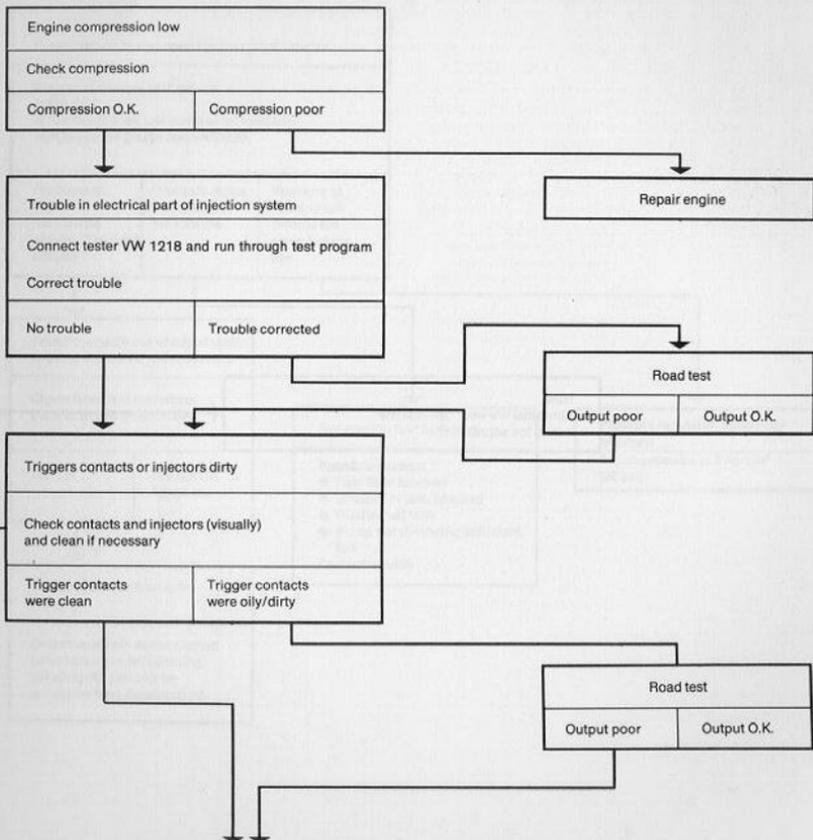

Poor output/
top speed
too low


Fuel consumption
too high

Engine
misfiring

CO value
too high






Wiring
diagram

Note
Abnormal tire wear can indicate
wrong toe adjustment

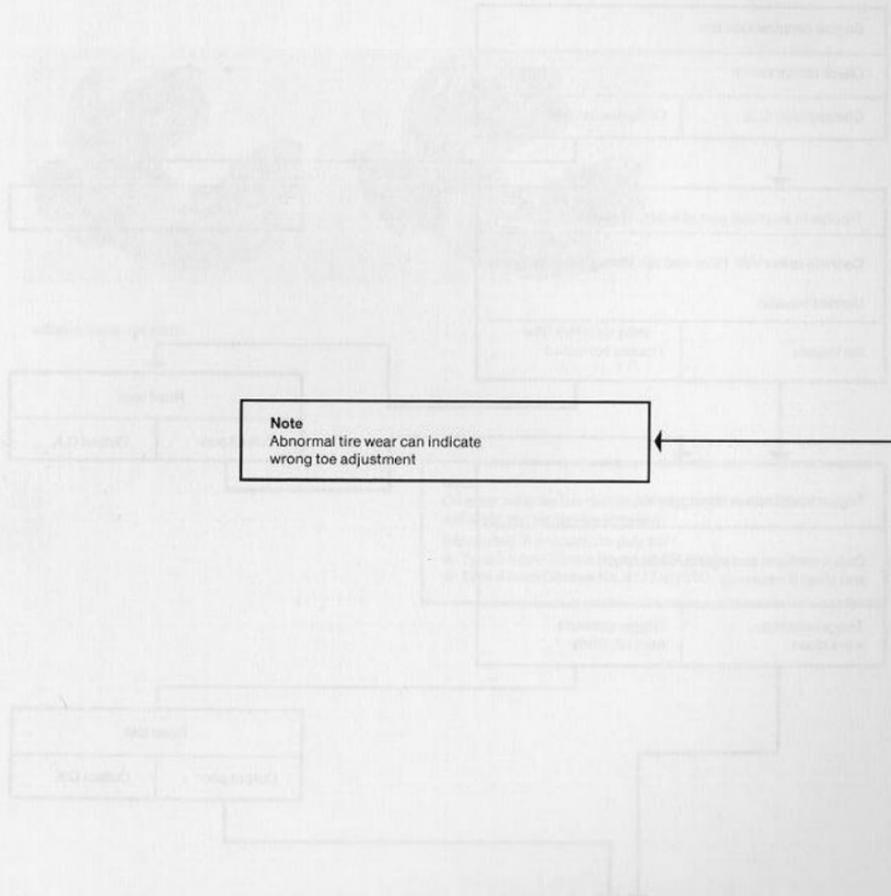

The diagram is a flowchart with several rectangular boxes connected by lines. The boxes contain text that is mostly illegible due to blurring. A prominent box in the center contains the text: **Note**
Abnormal tire wear can indicate
wrong toe adjustment. An arrow points from the right side of this box to a box in the flowchart below it.

Poor output / top speed too low (cont'd from page 45)

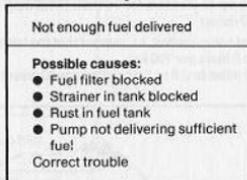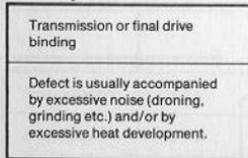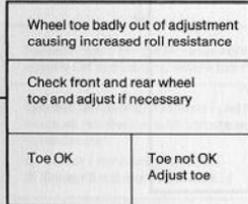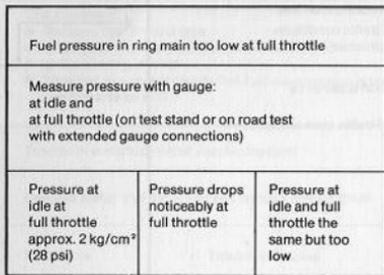

Poor output/
top speed
too low

Fuel con-
sumption
too high

Engine
misfiring

CO value
too high


Wiring
diagram

Road testing Instructions:

- Where possible customer should be present during road test
- Plan test route to include mixed driving and traffic conditions (equal parts of city traffic, open road and expressway)
- Do **not** switch heater on during the test
- Measure consumption with a fuel consumption tester or by filling fuel tank exactly before and after test
- Approximate consumption figures for mixed traffic at an ambient temperature above 0°C (32° F) are:
 - Type 3/ Manual approx.
18.7 mpg/US or 23 mpg/Imp.
 - Type 3/ Automatic approx.
17.6 mpg/US or 21.5 mpg/Imp.
 - Type 4/ Manual approx.
17 mpg/US or 20 mpg/Imp.
 - Type 4/ Automatic approx.
16.2 mpg/US or 19.9 mpg/Imp.

Caution

- These figures are only for comparison with figure obtained during road test under given driving and traffic conditions. They are not to be used for comparison with consumption figures given by customer.
- When vehicle is driven short distances in rush hours conditions, consumption can go up to 20 liters for 100 km (11.3 mpg /US or 13.4 mpg/Imp. for 60 miles)
- When discussing fuel consumption, remember that the heater (Type 4) also uses from 0.5 to 3 liters per 100 km (1 to 6 pts/US per 60 miles or 0.8 to 4.6 pts/Imp per 60 miles)

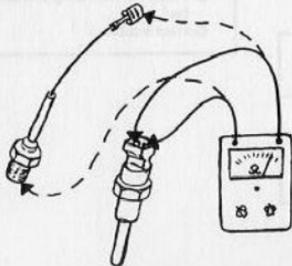

Fuel consumption too high

Test condition:

- Standard tire size and type
- Wheels turning freely (brakes, wheel bearings)
- Ignition timing correct
- Road test has shown clearly that fuel consumption is too high (see remarks on left)

Trouble in electrical part of injection system

Connect tester VW 1218 and run through test program

No trouble

Trouble corrected

Resistances of temperature sensors too high despite OK indication (mixture too rich)

Remove temperature sensors I and II and measure resistances with ohmmeter at room temperature

- Sensor I not more than 300Ω
- Sensor II not more than $2.5 \text{ k}\Omega$

Resistance not too high

Resistance too high

Pressure in ring main too high

Measure pressure with gauge
Specified figure 2 kg/cm^2 (28 psi)

Pressure OK

Pressure well above
 2 kg/cm^2 (28 psi)


Replace defective temperature sensor

Fuel consumption too high

Engine misfiring


CO value too high

Wiring diagram

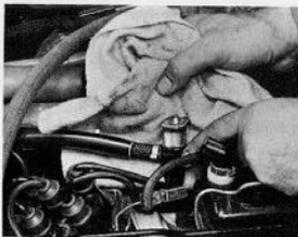


Note

- Detach cold start valve from intake air distributor but leave it connected to the ring main.
- Switch ignition on and off several times and check if fuel is delivered.

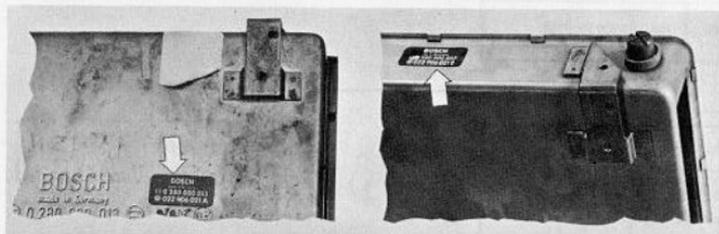

Fuel consumption too high (cont'd from page 49)

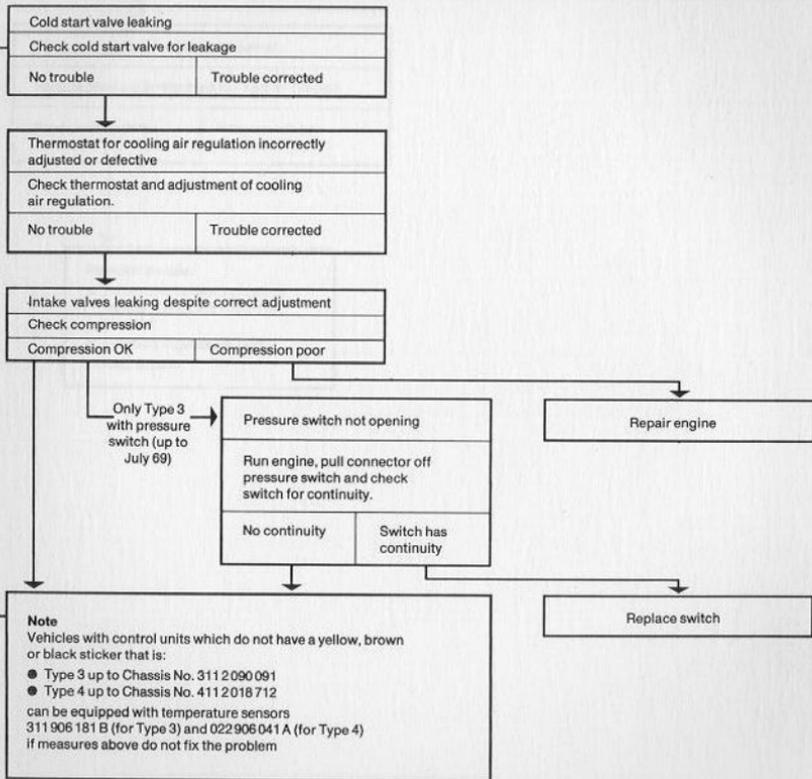

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Pressure regulator incorrectly adjusted	
Reduce pressure in ring main to 2 kg/cm ² (28 psi)	
Pressure cannot be reduced	Pressure can be reduced

Possible trouble:

- Return line between pressure regulator and tank kinked or blocked
 - Pressure regulator defective
- Correct trouble

Fuel consumption too high

Engine misfiring

CO value too high

Wiring diagram

Engine misfiring only when electrical components are switched on.

Engine misfiring at all times

Engine
misfiring

CO value
too high

Wiring
diagram

Engine misfiring only when electrical components are switched on

Trouble in voltage supply to control unit	
Check if there is a direct connection between battery positive terminal and terminal 30/51 on the voltage supply relay.	
Wiring direct	Wiring runs via fuse box

Poor ground connections	
Check ground connections between battery and body, between body and transmission	
Run engine and switch on all electrical components several times one after the other.	
Misfiring only when heater is switched on	No misfiring

Pull wire to voltage supply relay off at fuse box. Connect it directly to battery positive terminal

Trouble in electrical part of heater	
Possible trouble: ● Condenser in combustion air blower defective	
Replace combustion air blower.	
Still misfiring	No misfiring

See "misfiring at all times"

Engine misfiring

CO value too high

Wiring diagram

Note

If misfiring occurs only after deceleration the engine is probably sucking in oil through the crankcase breather or valve guides (can often be recognized by blue exhaust during deceleration).

In this case check crankcase ventilation system and valve guide wear.

Possible defects in ignition system

- Loose connections on coil
- Distributor cap (damp, cracked, burnt by tracking)
- Rotor defective
- Ignition timing incorrect (breaker points)
- Ignition cables poorly or incorrectly connected
- Spark plugs or connectors defective
- Arcing at ignition cables on distributor (through the rubber caps)
- Condenser defective
- Injection wiring touching ignition cables

Note

When checking connections do not forget the less accessible connections such as

- Voltage supply relay
- Pump relay
- Central ground connection on crankcase
- Wire 30 to voltage supply relay on battery positive (Type 4 only)
- Multi-pin connector on control unit

Engine misfiring at all the times

Test condition:

- Check if misfiring occurs only when electrical components are switched on and off. If so, see page 57.
- Check if misfiring occurs only after deceleration. If so, see remarks on left.

Trouble in ignition system

Check system and eliminate defects
(see remarks on opposite page).

No trouble

Trouble corrected

Faulty terminal or ground connections in the injection system

Check all connections systematically for tight fit and corrosion.
(see remarks on opposite page).

No trouble

Trouble corrected

Parts of injection system or wiring defective

Connect tester VW 1218 and run through test program
During test stages 4 to 11, tap the control unit by hand (to detect loose soldered connections)
During all other test stages, move wiring concerned to detect breaks in wires
Correct trouble


No trouble

Trouble corrected

Engine
misfiring

CD value
too high

Wiring
diagram

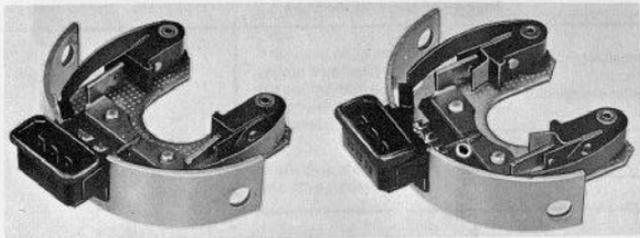

without deflector plate

with deflector plate

Note

On older vehicles distributor trigger contacts with oil deflector can be service installed.

Introduced in production: July 1971

- Type 3 from Chassis No. 311 2252242
- Type 4 from Chassis No. 411 2059500

Engine misfiring at all times (cont'd from page 59)


Trigger contacts oiled up/dirty	
Check contacts and clean if necessary.	
Contacts were clean	Contacts were oiled up/dirty



Generator/alternator or regulator defective	
Road test vehicle with V belt removed.	
Still misfiring	Not misfiring



Fuel supply inadequate
Possible trouble: <ul style="list-style-type: none">● Fuel filter blocked● Tank strainer blocked● Rust in fuel tank● Injectors blocked Correct trouble




Try a different regulator, install belt again and road test vehicle. If fault still exists: Repair or replace generator/alternator
--

Engine misfiring


CD value too high

Wiring diagram

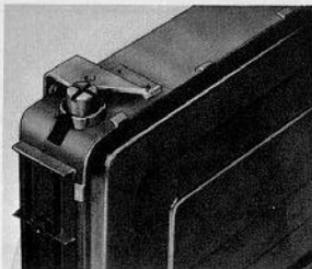

Note

The service installation of a potentiometer (311906019) will not eliminate the fault "CO value too high". This is intended only to improve mixture enrichment (Service remedy for hunting at idling speed).

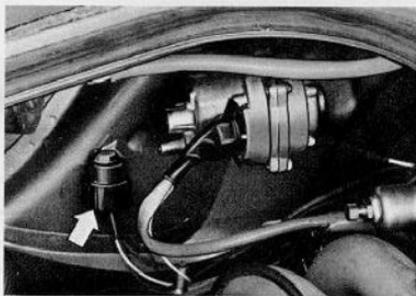

CO value too high

Test conditions:

- Valve clearance and ignition timing correct (very important)
- Engine temperature between 50 and 70°C (122–158°F)

Idling CO potentiometer (if installed)
incorrectly adjusted

Adjust CO with potentiometer (on control
unit or – if subsequently installed – in engine
compartment; see arrow in illustrations)

CO remains too high

CO can be adjusted

Pressure in ring main too high

Check pressure with gauge.
Specified figure: 2 kg/cm² (28 psi)

Pressure is correct

Pressure well above
2 kg/cm² (28 psi)

Trouble in electrical part of injection system

Connect tester VW 1218 and run through test program

No trouble

Trouble corrected

Only Type 3
with pressure
switch (up to
July 69)

Pressure regulator incorrectly adjusted

Set pressure to 2 kg/cm² (28 psi)

Pressure cannot be
adjusted

Pressure can be
adjusted

Possible trouble:


- Return line between pressure regulator and tank kinked or blocked
 - Pressure regulator defective
- Repair as necessary


CO value
too high

Wiring
diagram

Mechanical trouble in pressure switch	
Run engine, pull connector off pressure switch and see if CO is reduced	
CO not reduced	CO reduced


Check vacuum pipe to pressure switch or replace pressure switch

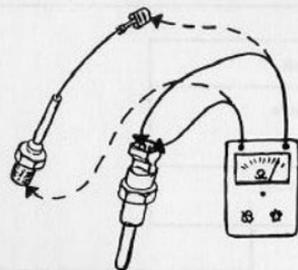

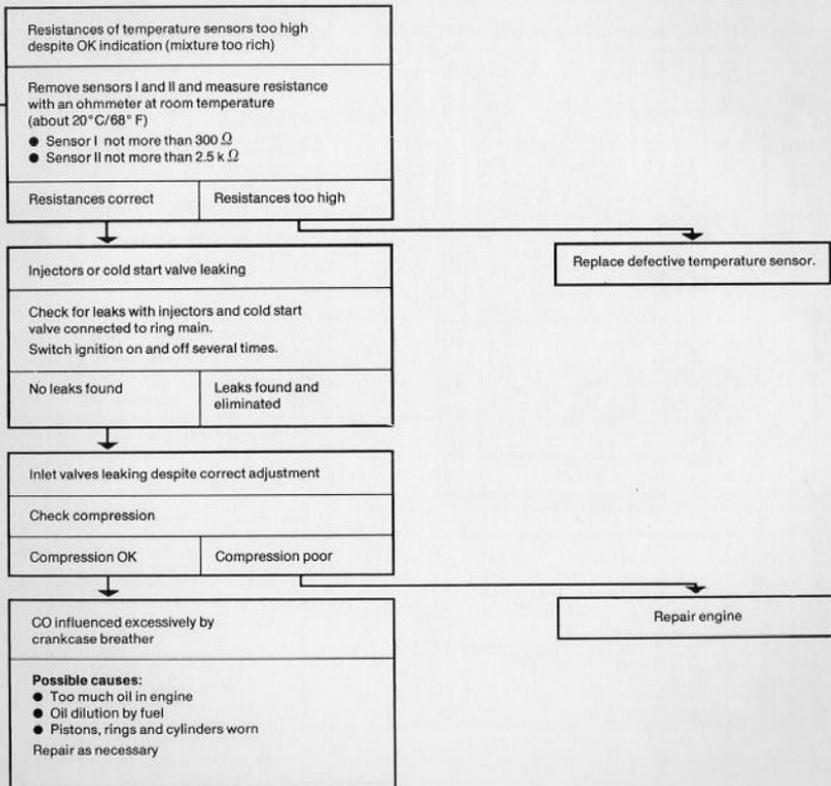

Caution

Before starting to work on any part of electrical system disconnect battery ground strap

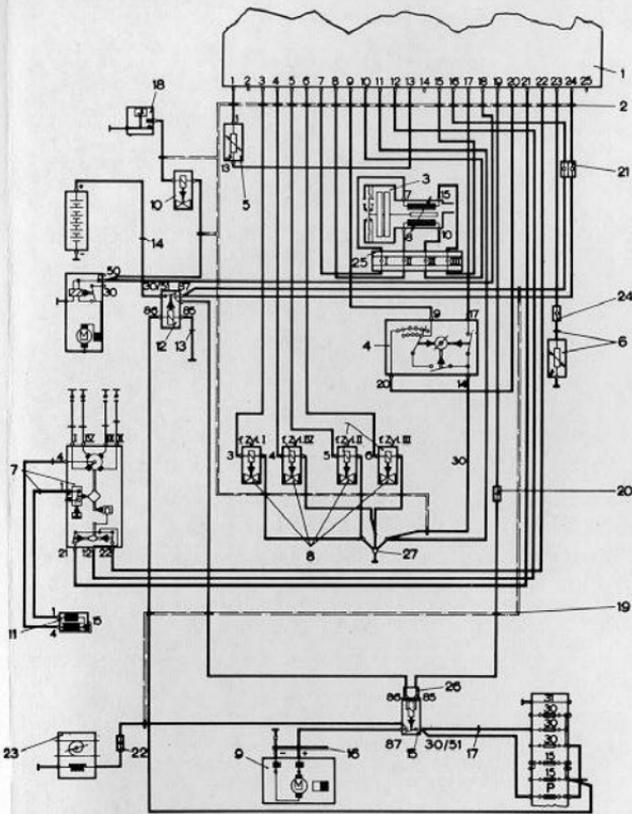


- 1 - Control unit
- 2 - Wiring harness - electronics
- 3 - Pressure sensor with full load diaphragm
- 4 - Throttle valve switch with acceleration enrichment
- 5 - Temperature sensor in intake air distributor
- 6 - Temperature sensor on cylinder head
- 7 - Ignition distributor with trigger contacts
- 8 - Injectors
- 9 - Fuel pump
- 10 - Cold starting valve
- 11 - Ignition coil
- 12 - Voltage supply relay
- 13 - Wiring for voltage supply relay
- 14 - Wiring, battery - voltage supply relay
- 15 - Fuel pump relay
- 16 - Wiring harness - fuel pump
- 17 - Wiring between fuse box and pump relay
- 18 - Thermo switch for cold starting device
- 19 - Wires of main wiring harness
- 20 -
- 21 - Wire connector - double
- 22 - Auxiliary air regulator
- 23 -
- 24 -
- 25 - 4 point connector with intermediate cable
- 26 - Plug housing for pump relay
- 27 - Ground connection on the engine housing


Type 3 from August 1971

Caution

Before starting to work on any part of electrical system disconnect battery ground strap

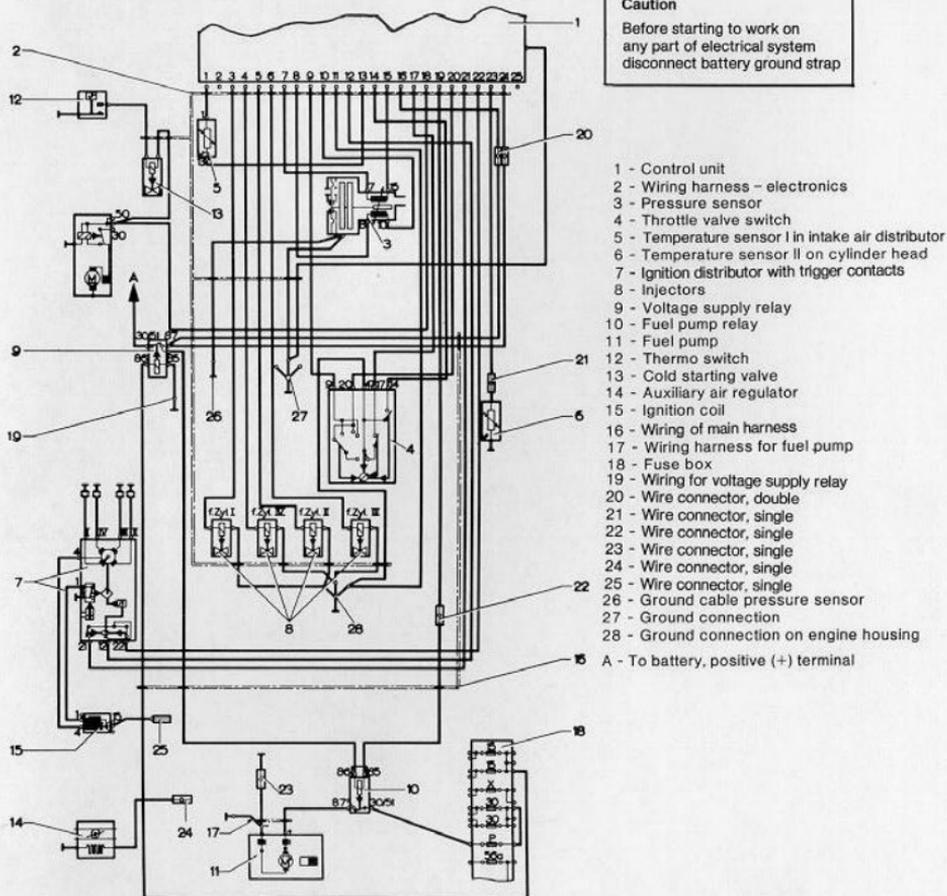

- 1 - Control unit
 - 2 - Wiring harness - electronics
 - 3 - Pressure sensor
 - 4 - Throttle valve switch
 - 5 - Temperature sensor I in intake air distributor
 - 6 - Temperature sensor II on cylinder head
 - 7 - Ignition distributor with trigger contacts
 - 8 - Injectors
 - 9 - Voltage supply relay
 - 10 - Fuel pump relay
 - 11 - Fuel pump
 - 12 - Thermo switch
 - 13 - Cold starting valve
 - 14 - Auxiliary air regulator
 - 15 - Ignition coil
 - 16 - Wiring of main harness
 - 17 - Wiring harness for fuel pump
 - 18 - Fuse box
 - 19 - Wiring for voltage supply relay
 - 20 - Wire connector, double
 - 21 - Wire connector, single
 - 22 - Wire connector, single
 - 23 - Wire connector, single
 - 24 - Wire connector, single
 - 25 - Wire connector, single
 - 26 - Ground cable pressure sensor
 - 27 - Ground connection
 - 28 - Ground connection on engine housing
- A - To battery, positive (+) terminal

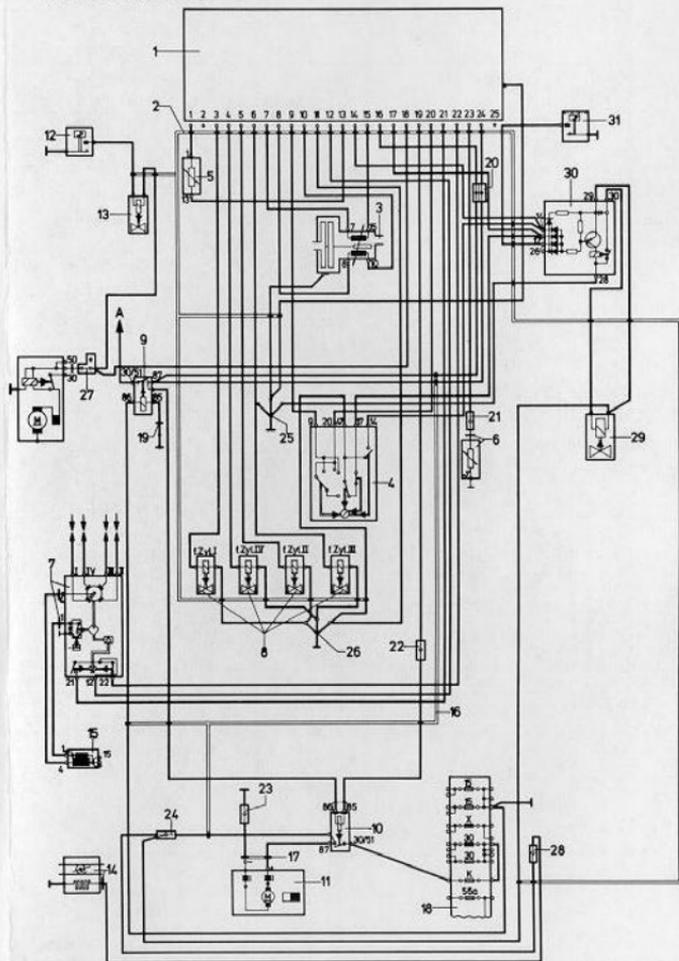


Caution
 Before starting to work on any part of electrical system disconnect battery ground strap

- 1 - Control unit
- 2 - Wiring harness – electronics
- 3 - Pressure sensor
- 4 - Throttle valve switch
- 5 - Temperature sensor I in intake air distributor
- 6 - Temperature sensor II on cylinder head
- 7 - Ignition distributor with trigger contacts
- 8 - Injectors
- 9 - Voltage supply relay
- 10 - Fuel pump relay
- 11 - Fuel pump
- 12 - Thermo switch
- 13 - Cold starting valve
- 14 - Auxiliary air regulator
- 15 - Ignition coil
- 16 - Wiring of main harness
- 17 - Wiring harness – fuel pump
- 18 - Fuse box
- 19 - Wiring for voltage supply relay
- 20 - Wire connector – double
- 21 - } Wire connector – single
- 22 - }
- 23 - }
- 24 - }
- 25 - Ground connection
- 26 - Ground connection, engine housing
- 27 - Wire connector – multiple
- 28 - Wire connector – single
- 29 - Valve for exhaust gas recirculation
- 30 - Relay for exhaust gas recirculation
- 31 - Thermo switch

A - To battery positive (+) terminal

Type 4 up to July 1971

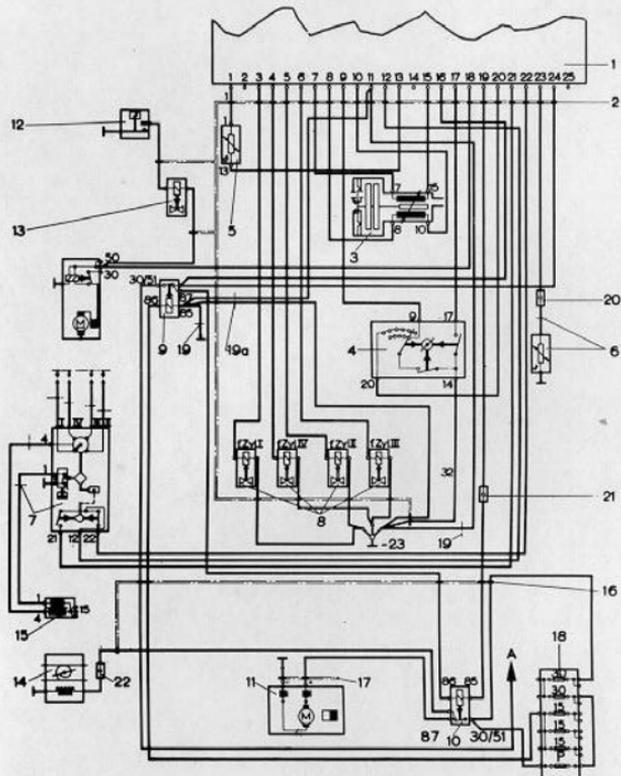


Caution

Before starting to work on any part of electrical system disconnect battery ground strap

- 1 - Control unit
- 2 - Wiring harness - electronics
- 3 - Pressure sensor
- 4 - Throttle valve switch with acceleration enrichment
- 5 - Temperature sensor I on intake air distributor
- 6 - Temperature sensor II on cylinder head
- 7 - Ignition distributor with impulse trigger contacts
- 8 - Injectors
- 9 - Voltage supply relay
- 10 - Fuel pump relay
- 11 - Fuel pump
- 12 - Thermo switch for cold starting device
- 13 - Cold starting valve (on intake air distributor)
- 14 - Auxiliary air valve
- 15 - Ignition coil
- 16 - Wiring of main harness
- 17 - Wiring harness - fuel pump
- 18 - Fuse box
- 19 - Ground connection, Sedan
- 19a - Ground connection, Wagon
- 20 -
- 21 - } Wire connector - single
- 22 -
- 23 - Ground connection on the engine housing

A - to battery positive (+) terminal

Type 4 from August 1971
 (see additional diagram on next page)

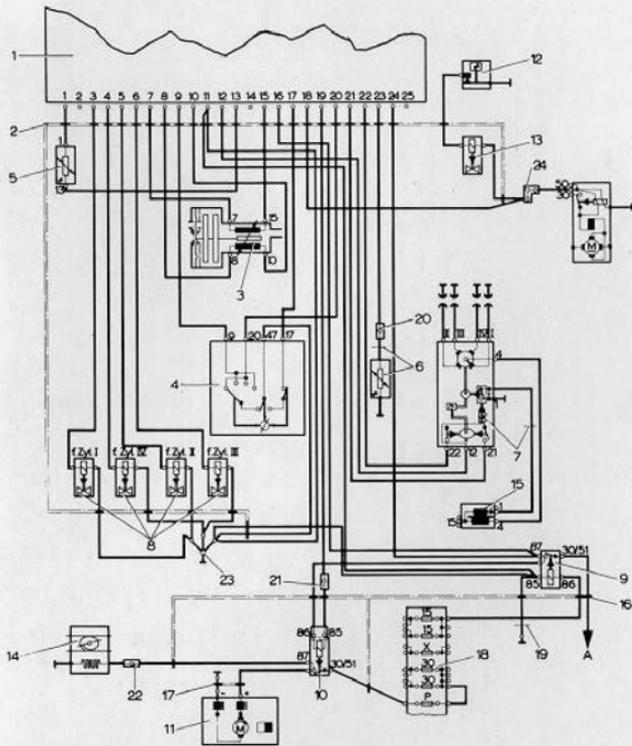

Caution


Before starting to work on any part of electrical system disconnect battery ground strap

- 1 - Control unit
 - 2 - Wiring harness - electronics
 - 3 - Pressure sensor
 - 4 - Throttle valve switch
 - 5 - Temperature sensor I in intake air distributor
 - 6 - Temperature sensor II on cylinder head
 - 7 - Ignition distributor with trigger contacts
 - 8 - Injectors
 - 9 - Voltage supply relay
 - 10 - Fuel pump relay
 - 11 - Fuel pump
 - 12 - Thermo switch
 - 13 - Cold starting valve
 - 14 - Auxiliary air regulator
 - 15 - Ignition coil
 - 16 - Wires of the main wiring harness
 - 17 - Wiring harness - fuel pump
 - 18 - Fuse box
 - 19 - Wiring harness - voltage supply relay
 - 20 - } Wire connector - single
 - 21 - }
 - 22 - }
 - 23 - Ground connection
 - 24 - Wire distributor
- A - to battery positive (+) terminal

Type 4 from August 1971 (additional wiring diagram)
 (see also diagram on preceding page)

Caution

Before starting to work on
 any part of electrical system
 disconnect battery ground strap

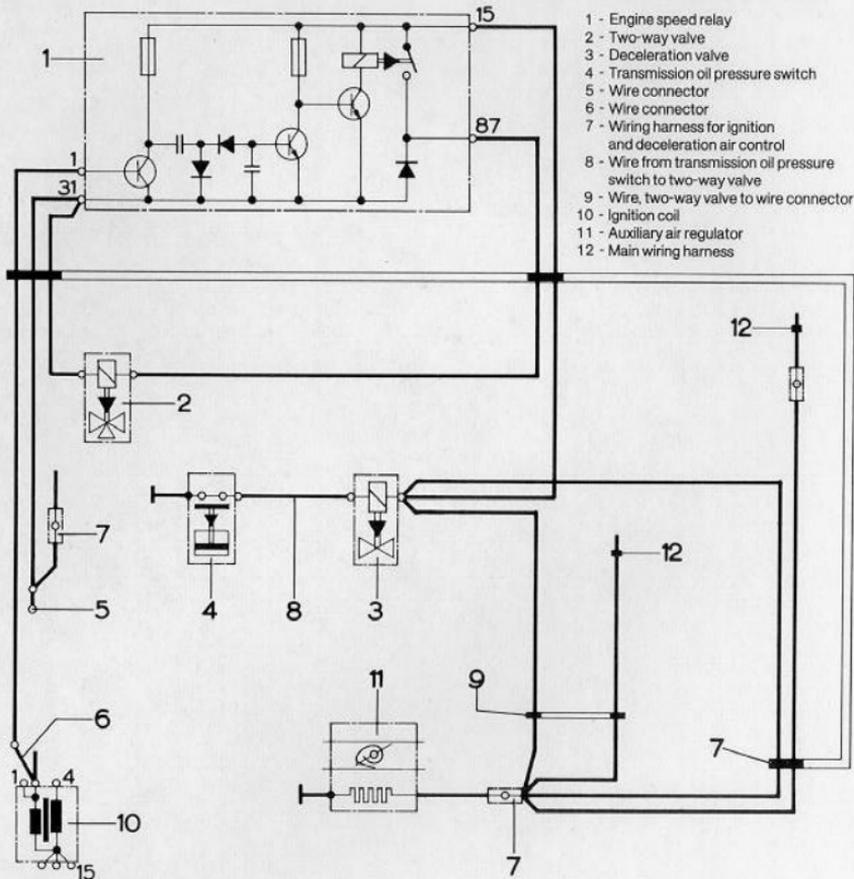

- 1 - Engine speed relay
- 2 - Two-way valve
- 3 - Deceleration valve
- 4 - Transmission oil pressure switch
- 5 - Wire connector
- 6 - Wire connector
- 7 - Wiring harness for ignition and deceleration air control
- 8 - Wire from transmission oil pressure switch to two-way valve
- 9 - Wire, two-way valve to wire connector
- 10 - Ignition coil
- 11 - Auxiliary air regulator
- 12 - Main wiring harness

readme.txt

Volkswagenwerk AG
Troubleshooting Guide
for Engines with Electronic Fuel Injection MPC (manifold pressure controlled)

Type 3 all
Type 4 /Manual Transmission
Type 4 /Automatic Transmission (up to Oct. 1973)

Please read page 2 on how to use the manual, particularly when it comes to using the thumb indexes.

Manual was scanned in and each image numbered according to the page number. Please note that one page (p.23 & p.24) is missing. Sorry, but that's how it came when I bought it used. If you can figure it out or have that page then please contact me (see below). Also note that the wiring diagrams at the end of the guide are foldouts, so the even numbered pages 70-78 were not scanned as they are part of the diagrams foldout.

I scanned as much of the manual as possible and have tried to keep the scanning as consistent as possible. This allows for easy printing and cutting of the pages so you can make your own manual. I have made no gamma corrections as I don't have an application that can do this for me in a batch process (more than one image at a time). For better images with less bleed-through from the opposite side I suggest you increase the gamma correction slightly.

Don't forget to cut out the thumb indexes and remove the indexing tabs on the right side of the manual that don't apply. For example, for the Starting Trouble pages remove the Idling Trouble, Hesitation Trouble, etc. index tabs that are shown. This way you will have a good troubleshooting manual just like the original.

Please share this information freely with others. I welcome any feedback, positive or negative. I can always be reached through email as long as I'm alive :)

Enjoy!

Toby Erkson
air_cooled_nut@pobox.com